

CONTENTS			CONTENTS		
	Fluid head specification	1		Tripod specification	15 16
	Parts(GH03)			Parts(AT7402A)	
	Set up & Use (GH03)			Use AT7402A	
	1. Install Panbar			1. Loose & lock leg tube	
	Remove quick release plate			· ·	
	3. Adjusting tilt position			2. Adjusting tripod height	
	4. Adjusting pan position			3. Anti-slide rubber feet	
	5. Pan & Tilt drag adjustment			4. Floding tripod	19
	6. Mounting the camera				
	7. Extra functions of GH03,GH06 plate			Parts(GA/GC101)	20
				Parts(GA/GC102)	21
	Parts(GH06-GH25)	7		Parts(GA/GC751 GA/GC752)	22
	Set up & Use(GH06-GH25)	8-12		Use(GA/GC751 GA/GC752 GA/GC101 GA/GC102)	23-24
	1. Installing Panbar	8		1. Loose & lock leg tube	23
	2. Installing fluid head to tripod	8		Adjust middle spreader	
	3. Removing quick release plate	8		3. Adjust ground spreader	
	4. Mounting the Camcorder	9		Remove mid-level spreader	
	5. Mounting the camera	9-10		Install & Remove ground spreader	
	6. Adjusting counterbalance	11		Floding tripod	
	7. Adjusting titl drag	11		• .	
	8. Adjusting pan drag			Maintenance	
	9. Change of the batteries (GH08/08L/10/10L)			Notice & Warning	26
	10. Change of the batteries (GH15,GH25)	14			




Model No.	Bowl size	Net weight	Load capacity	Grades of drag	Counterbalance Tilt range		Temperature range
GH03	75mm	1kg	4kg	Variable	Instable	+90° ~ -60°	-40°C ~ 80°C
GH05	75mm	1.7kg	3-8kg	Instable	0-2	+90° ~ -45°	-30°C ~ 60°C
GH06	75mm	1.6kg	6kg	0-3	0-5	+90° ~ -60°	-40°C ~ 80°C
GH08	75mm	1.7kg	8kg	Instable	0-6	+90° ~ -60°	-40°C ~ 80°C
GH10	75mm	1.9kg	10kg	0-3	1-7	+90° ~ -60°	-40°C ~ 80°C
GH10L	100mm	2kg	10kg	0-3	1-7	+90° ~ -60°	-40°C ~ 80°C
GH15	100mm	3.7kg	15kg	0-5	0-9	+90° ~ -75°	-40°C ~ 80°C
GH20	100mm	3.8kg	20kg	Instable	0-8	+90° ~ -60°	-30°C ~ 60°C
GH25	100mm	4kg	25kg	0-7	1-15	+90° ~ -80°	-40°C ~ 80°C

► Head No.

→ Fluid Head


→ E-IMAGE No.

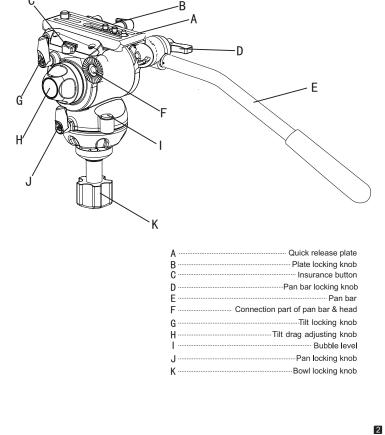

SET UP & USE (GH03)


1.Install Panbar


Open the panbar adjust the panbar to your request position, then screwing the panbar knob "D" to "F " hole, and lock it.

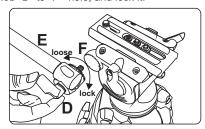

2. Removing quick release plate


Loose plate locking knob "B" , pull the slide plate to the rear of the fluid head whilst pressing the safety button "C" .

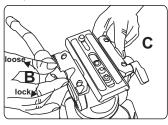

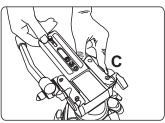


3.Adjusting tilt position

Lock or Loose locking knob "G" to adjust tilt position.

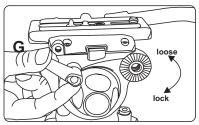

4.Adjusting pan position

Lock or Loose locking knob "J" to adjust pan position.

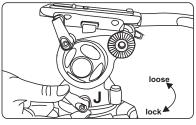


5.Pan & Tilt drag adjustment

Screwing or loose tilt locking knob "H" , then slowly move the fluid head vertically until find your required drag. (GH03 is with fixed pan drag) $\,$




MOUNTING THE CAMERA

6.Attach the slide plate to the camcorder, screwing camera 1/4" screw or 3/8" screw into the camcorder's threaded hole WITHOUT APPLYING FORCE(such as using a coin).

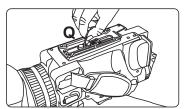


7.Please make sure pan & tilt knob are locked. Hold the camera with one hand.Insert the slide plate onto the rear of the platform until locking button "C" clicks.Adjust the center of gravity to right position, the lock the plate tightly.

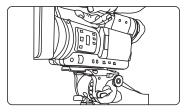

EXTRA FUNCTIONS OF GH03,GH06 PLATE

8.Extra functions of GH03,GH06 plate


With special desigh, the plate of GH03,GH06 have special function as quick action, just with one press as shown, the plate can be mounted on the platefrom tightly.

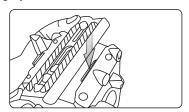

5


6


/////

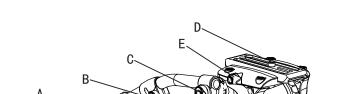

PARTS(GH06~GH25)

7

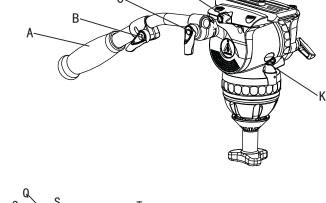


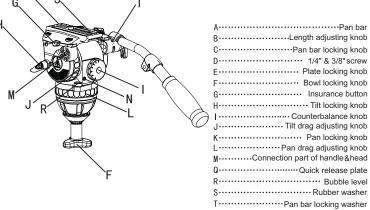


SET UP & USE(GH06-GH25)

1. Installing Panbar

Open the panbar, screwing the panbar knob "A" to "M" hole, and lock it. Loose knob "B" , you can extend the length and adjust the pan bar angle, that you like.

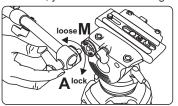


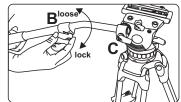


/////

2. Installing fluid head to tripod

Please adjust the tripod to your required height and lock every stage tightly. Put the head on the tripod, level the fluid head using the bubble level. Then tighten the bowl locking knob "F" .

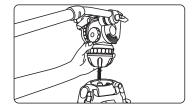


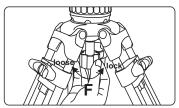

3. Removing quick release plate

Loose plate locking knob "E" , pull the slide plate to the rear of the fluid head whilst pressing the safety button "G" .




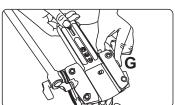


MOUTING THE CAMCORDER VIA ADAPTER

4. Mounting the camcorder via adapter


4.1 Attach the slide plate to the camcorder adapter, screwing camera 1/4" screw or 3/8" screw into the camcorder adapter's threaded hole WITHOUT APPLYING FORCE(such as using a coin).

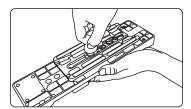

4.2 Insert the plate into the plate mount.

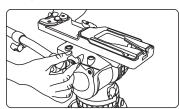


4.3 Please make sure pan & tilt knob are locked. Insert the slide plate onto the rear of the platform until locking button "C" clicks,then lock the plate. Amount the camcorder on the adapter. Loose plate locking knob, adjust the center of gravity to right position, the lock the plate tightly.

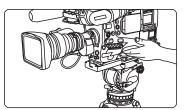

MOUNTING THE CAMERA

5.Mouting the camera

5.1 Attach the slide plate to the camcorder, screwing camera 1/4" screw or 3/8" screw into the camcorder's threaded hole WITHOUT APPLYING FORCE(such as using a coin).

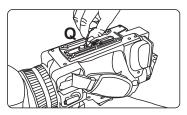

5.2 Please make sure pan & tilt knob are locked. Hold the camera with one hand. Insert the slide plate onto the rear of the platform until locking button "C" clicks. Adjust the center of gravity to right position, the lock the plate tightly.



9


/////


ADJUSTING COUNTERBALANCE & DRAG

ADJUSTING PAN DRAG

6.Adjusting counterbalance


Loose the tilt locking knob. Hold the camera by securing the pan bar. Turn the counterbalance dial to that number which can make camera remaining in position with hands free.

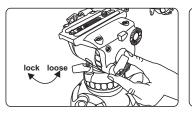

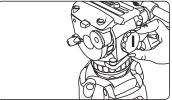

7. Adjusting tilt drag


Loose tilt locking knob, turn the tilt drag dial to the required setting , then slowly move the fluid head vertically until find your required drag (PS: GH08 & GH08L are with fixed tilt drag)

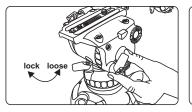




8. Adjusting pan drag

Loose pan locking knob, turn the pan drag dial to the required setting, then slowly move the fluid head horizontally until find your required drag. Please make sure you always turn the dia to index number, NOT between the two index, or it will damage the inner pins or disks. (PS: GH08, GH08L are with fixed pan drag)

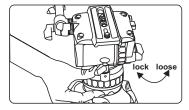

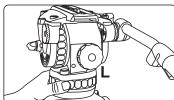

/////

11

CHANGE BATTERY OF ILLUMINATED LEVELING BUBBLE (GH08 GH08L GH10 GH10L)

9.Change of the batteries (GH08, GH08L ,GH10,GH10L)


9.1 Illuminated leveling bubble. Just press the illuminous button "N" when shooting at the night, lamp will be illuminated and turn off after 25 s automatically.




9.2 Change battery of illuminated leveling bubble (GH08,GH08L, GH10, GH10L) The illumination is powered by 2 standard type button cells located in the battery holder. Turn the counterbalance and tilt drag dial to "0" position, Press the pan bar until you find the battery holder, lock the tilt locking knob.



9.3 Please loose the cover and take out old ones. Insert 2 new button cells according to the "+" and "-" symbols as indicated.

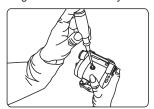


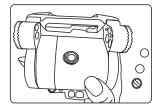


CHANGE BATTERY OF ILLUMINATED LEVELING BUBBLE (GH15 GH25)


10. Change of the batteries (GH15,GH25)

10.1 Change battery of illuminated leveling bubble (GH15,GH25)

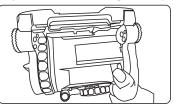



10.2 The illumination is powered by 2 standard type 7# batteries located in the battery holder. Turn the counterbalance and tilt drag dial to "0" position, Press the pan bar until you find the battery holder, lock the tilt locking knob.

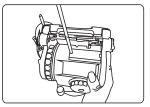

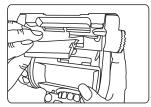


10.3 Please loose the cover and take out old ones. Insert 2 new 7# batteries according to the "+" and "-" symbols as indicated.

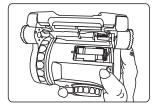


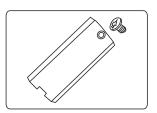

13

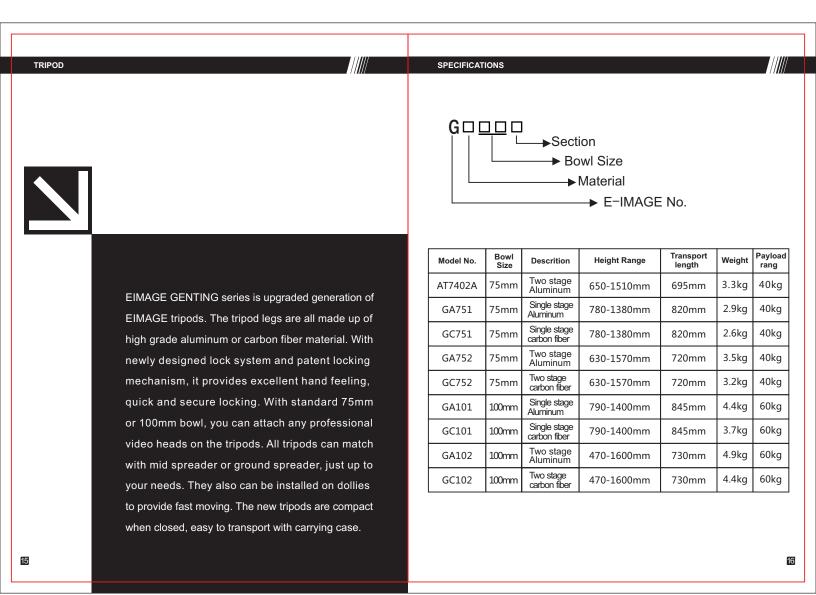


17

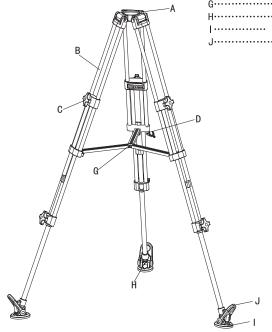

USE AT7402A

1.Loose & lock leg tube

Loose: turn locking knob "C" anti-clockwise Lock: turn locking knob "C" clockwise

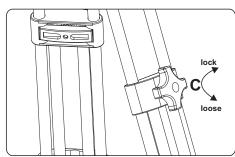


Important message: before unfold the tripod, please loose all the locking knobs "C", then adjust it to your requested length and lock it.

2.Adjusting tripod height

Loose all the locking knobs and extend the legs to your request height, then lock knobs tightly.

3. Anti-slide rubber feet

Illustration as follow pictures, pull the pad-removing tab "J", separate anti-sliding pad with leg. $\begin{tabular}{ll} \hline \end{tabular}$

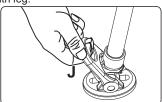


Important message: this spike foot is used for out door shooting


USE AT7402A PARTS(GA101/GC101)


4. Folding tripod

a: Loose the locking knobs of each stages and adjust the legs to minimum length, then locking all the knobs.

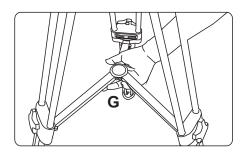



b: One hand catch the bowl base, another hand pull the middle spreader "G" and fold it. Then pull out retractable easy hook "D" and wrap around legs and bind them together.

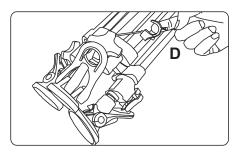

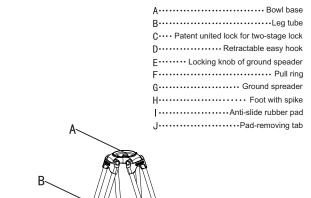

20

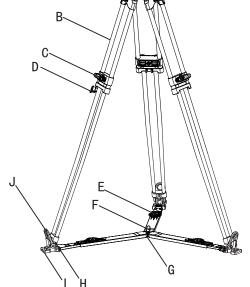

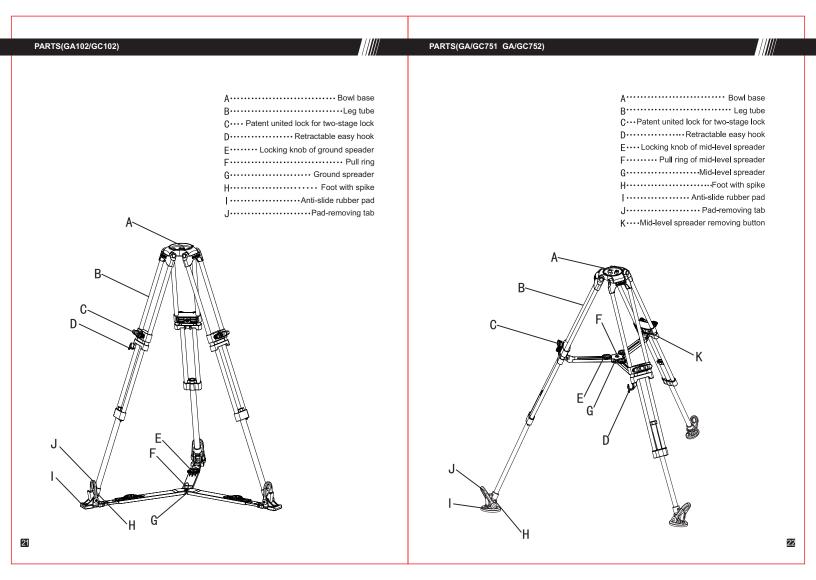


USE(GA/GC751 GA/GC752 GA/GC101 GA/GC102)

1.Loose & lock leg tube

Loose: turn the locking knob "C" anti-clockwise Lock: turn the locking knob "C" clockwise until tight



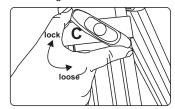


Important message: Adjust tripod height Loose all the locking knobs and extend the legs to your request height, then lock knobs tightly.

2.Adjust middle spreader

Loose the locking knob "E" of each arm by turning anti-clockwise, extend the arm to your request length, then re-lock it.


3.Adjust ground spreader

Loose the locking knob "E" of each arm by turning anti-clockwise, extend the arm to your request length, then re-lock it.

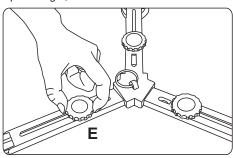

USE(GA/GC751 GA/GC752 GA/GC101 GA/GC102)


4.If you don't need mid-level spreader, pull out the locking bolts "K" of 3 arms and remove it.

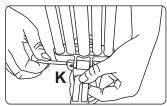

5.Install & Remove ground spreader


Illustration as follow pictures, pull the pad-removing tab "J", separate anti-sliding pad with leg.




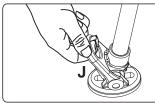

6.Folding tripod

- a: Loose the locking knobs of each stages and adjust the legs to minium length, then locking all the knobs. b.Adjust the mid-spreader or ground-spreader to minum length,then locking all
- the knobs.
- c. One hand catch the bowl base, another hand pull the ring of ground spreader "F"and fold it. Then pull out retractable easy hook "D" and wrap around legs and bind them together.

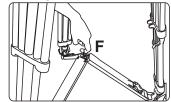

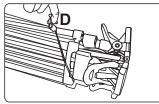

24

Maintenance Notice & Warning



Daily maintenance:

Storage and transport:

- When not using head for a long time, please turn all the knobs to the minimum
- When not using tripod, please don't place vertically to avoid the broken
- When not using tripod or transportation, please keep it in the carry bag.

Function inspection:

- Please check the tripod payload and head locking condition, in order to avoid the accident
- Please check and adjust tripod and head locking condition regularly, in order to increase service life.

Cleaning & Maintenance:

- 1.Using a regular with a lint-free cloth to clean tripods.
- 2.Please keep it in carrying case if not use it for long time.
- 3.Using a semi-stiffe brush or vacuum

Always engage safety locks and devices where applicable on the products. $% \left(1\right) =\left(1\right) \left(1\right) \left$

Don't use product at temperatures less than -30° or more than 60°. Cleaning with mild detergent and a soft cloth. Remove dust and sand from all locking threads and sliding segments. Dry the product after use in wet conditions.

IMPORTANT; Not recommended to use in seawater

If any questions during using process, please read the instruction carefully or ask help from your local distributor.

In the event on the product becoming defective, the unit should be returned to an authorized E-IMAGE service agent,

