


BM7

PortKeys

User manual

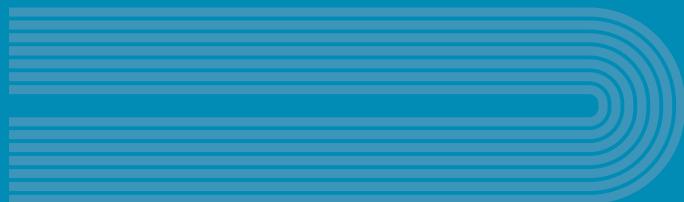

Address : No:1406 Cloud Park 3D Longgang District Shenzhen China



Address : No:1502 Asia Industry Park Banli Blvd Shenzhen China

Service Hotline : 4008090896

Email : sales@pkscorp.com Website : www.pkscorp.com

SHENZHEN PORTKEYS ELECTRONIC TECHNOLOGY CO.,LTD

Product appearance size

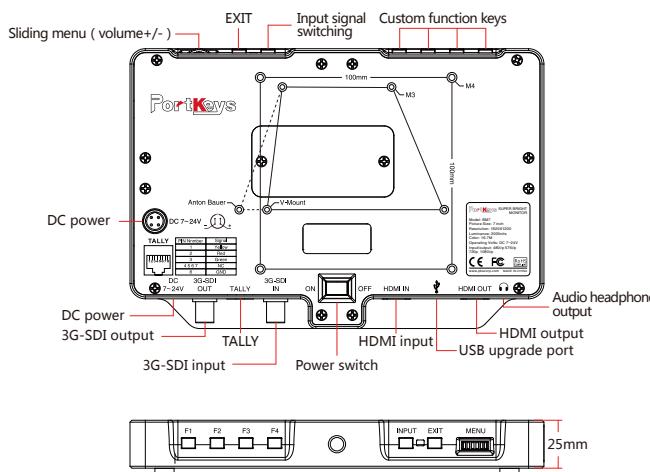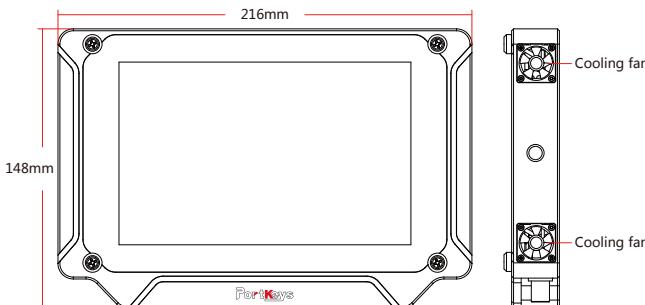

⚠️ Operating ambient temperature range : 0°C~40°C

Standard accessories

- BM7 Monitor *1
- Screen Cleaning Cloth *1
- M2 Inner Hexagon Key (Suitable with M3 Inner Hexagon Screw) *1
- Screen Protector *1
- Aluminum Frame *1
- IDX V Mount Battery Plate *1
- BP6-S Battery Plate *1
- USB Drive *1
- Safety Case *1
- Power Cable 4 Cores Mini Cannon XLR to D-TAP (B ANTON MALE) *1

Parameter

Size	7"
Dimension	216x148x25mm
Viewing Angle	178°H/178°V
Brightness(nit)	2000
Resolution	1920X1200
Contrast Ratio	1200:1
Weight	0.85kg
Color	8bit
Backlight	LED
Material	Aluminum alloy+Toughened glass
Input Voltage	DC 7~24V
Power Consumption	12W~26W
Signal input	3G/HD/SD-SDI/HDMI
Signal output	3G/HD/SD-SDI/HDMI
Headphone output / input	Output
Menu Language	简体中文/English

Supported input resolution and frame rate

SDI signal

1920×1080p@50Hz,59.94Hz,60Hz YUV422

1920×1080p@23.98Hz,24Hz,25Hz,29.94Hz,30Hz

YUV444/YUV422/RGB444

1920×1080psf@23.98Hz,24Hz,25Hz,29.97Hz,30Hz

YUV444/YUV422/RGB444

1920×1080i@50Hz,59.94Hz,60Hz YUV444/YUV422/RGB444

1280×720p@50Hz,59.94Hz,60Hz YUV444/YUV422/RGB444

720×480i@59.94Hz YUV422

720×576i @50Hz YUV422

HDMI signal

1920×1080p@23.98Hz,24Hz,25Hz,29.97Hz,30Hz,50.94Hz,60Hz

1920×1080psf@23.98Hz,24Hz,25Hz,29.97Hz,30Hz

1920×1080i@50Hz,59.94Hz,60Hz

1280×720p@50Hz,59.94Hz,60Hz

720×576i&720×576p@50Hz

720×480i&720×480p@59.94Hz,60Hz

Supported output resolution and frame rate

SDI signal

1920×1080p@50Hz,59.94Hz,60Hz YUV422

1920×1080p@23.98Hz,24Hz,25Hz,29.94Hz,30Hz

YUV444/YUV422/RGB444

1920×1080psf@23.98Hz,24Hz,25Hz,29.97Hz,30Hz

YUV444/YUV422/RGB444

1920×1080i@50Hz,59.94Hz,60Hz YUV444/YUV422/RGB444

1280×720p @50Hz,59.94Hz,60Hz YUV444/YUV422/RGB444

720×480i @59.94Hz YUV422

720×576i @50Hz YUV422

HDMI signal

1920×1080p@23.98Hz,24Hz,25Hz,29.97Hz,30Hz,50.94Hz,60Hz

1920×1080psf@23.98Hz,24Hz,25Hz,29.97Hz,30Hz

1920×1080i@50Hz,59.94Hz,60Hz

1280×720p@50Hz,59.94Hz,60Hz

720×576i&720×576p@50Hz

720×480i&720×480p@59.94Hz,60Hz

[MAIN]

[Guides]

Guides	<u>Press MENU, Then ▲▼</u>	Off / 80% / 90% / 15:9 / 4:3 15:1 / 1.85:1 / 21 / 2.35:1 / Custom	◀
H (Custom)	<u>Press MENU, Then ▲▼</u>	1% ~ 100%	▶
V (Custom)	<u>Press MENU, Then ▲▼</u>	1% ~ 100%	▶
Guides Masks	<u>Press MENU, Then ▲▼</u>	Off/On	▶
Crosshair	<u>Press MENU, Then ▲▼</u>	Off/On	▶
Grids	<u>Press MENU, Then ▲▼</u>	1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 10 / Off	▶
back			◀

[Video Config]

Brightness	<u>Press MENU, Then ▲▼</u>	0~100	▶
Contrast	<u>Press MENU, Then ▲▼</u>	0~100	▶
Chroma	<u>Press MENU, Then ▲▼</u>	0~100	▶
Sharpness	<u>Press MENU, Then ▲▼</u>	0~100	▶
Tint	<u>Press MENU, Then ▲▼</u>	0~100	▶
Color Temperature	<u>Press MENU, Then ▲▼</u>	5600K / 6500K / 7500K / 9300K / Manual	◀
Manual	<u>Press MENU</u>	Red Green Blue Back	<u>Press MENU, Then ▲▼</u> <u>Press MENU, Then ▲▼</u> <u>Press MENU, Then ▲▼</u> <u>Press MENU, Then ▲▼</u>
Backlight	<u>Press MENU, Then ▲▼</u>	Low/Middle/High	▶
Aspect	<u>Press MENU, Then ▲▼</u>	User / Full / 16:9 / 15:9 / 4:3 / 1.5:1 / 1.85:1 / 2:1 / 2.35:1	◀
User	<u>Press MENU</u>	Aspect Wide Height Back	<u>Press MENU, Then ▲▼</u> <u>Press MENU, Then ▲▼</u> <u>Press MENU, Then ▲▼</u> <u>Press MENU, Then ▲▼</u>
Back			◀

[System Config]

OSD-Language	<u>Press MENU, Then ↗↖↙↙</u>	◀ 简体中文/English ▶
OSD-Duration	<u>Press MENU, Then ↗↖↙↙</u>	◀ 5Sec/10Sec/15Sec/20Sec/25Sec/30Sec/Off ▶
OSD-Transparency	<u>Press MENU, Then ↗↖↙↙</u>	◀ Low/Middle/High/Off ▶
Menu Setup	<u>Press MENU, Then ↗↖↙↙</u>	◀ User1/User2/User3/User4/User5 ▶
DSLR AutoScaling	<u>Press MENU, Then ↗↖↙↙</u>	◀ DSLR-16:9/DSLR-3:2/ DSLR-Full/DSLR-Off ▶
System Reset	<u>Press MENU, Then ↗↖↙↙</u>	◀ Off/On ▶
Flip Control	<u>Press MENU</u>	<div style="border: 1px solid black; padding: 5px;"> Display Flip Mode <u>Press MENU, Then ↗↖↙↙</u> <u>◀ Off/On ▶</u> H Flip <u>Press MENU, Then ↗↖↙↙</u> <u>◀ Off/On ▶</u> V Flip <u>Press MENU, Then ↗↖↙↙</u> <u>◀ Off/On ▶</u> Back <u>Press MENU</u> </div>
Fan	<u>Press MENU, Then ↗↖↙↙</u>	◀ Off/On ▶
Back		◀

Back



[Function Setup]

- *Grids*
- *Peaking
- *False Color
- *Zebra
- *UnderScan
- DSLR Scaling*
- *Waveform*
- *Zooming
- *Audio Meters
- Check Field*
- H/V Delay*
- *Guides*
- *Cross Hair
- *HDR Checking

*Note: Set these functions onto custom shortcut keys, the related function setting menu appears after 2 seconds long press.

*Note: Continuous click key to cycle switch.

Function 1 Press MENU

Function 2 (Same function 1)

Function 3 (Same function 1)

Function 4 (Same function 1)

Back



[Firmware]

Version Information	<u>Press MENU</u>	Firmware Ver BM7-V1.04 MCU Ver V3.03
Update (USB)	<u>Press MENU</u>	Are You Sure? <u>Press MENU, Then ↗↖↙↙</u> Yes/No
Usage status	<u>Press MENU</u>	Power Cycles 30 Run Time 000005.0H
Exit		<u>Press MENU</u>

⚠ Please note our official website (www.pkscorp.com) timely update the latest firmware!

[Exit]

***Shortcut keys (hidden menu operation) Operation :**

Long press in 3 sec set "**Grids**" onto one custom function key

[Grids Setting]

Grids	<u>Press MENU, Then ↺</u>	◀ Off/1/2/3/4/5/6/7/8/9/10 ▶
Color	<u>Press MENU, Then ↺</u>	◀ Red/Green/Blue/Black/White ▶
Exit		◀ ▶

Long press in 3 sec set "**Peaking**" onto one custom function key

[Peaking Setting]

Factor	<u>Press MENU, Then ↺</u>	◀ 0-127 ▶
Color	<u>Press MENU, Then ↺</u>	◀ Red/Green/Blue/Black/White ▶
Exit		◀ ▶

Long press in 3 sec set "**False Color**" onto one custom function key

[False Color Setting]

Under Warn.	<u>Press MENU, Then ↺</u>	◀ -10 ~ 15 ▶
Over Warn.	<u>Press MENU, Then ↺</u>	◀ 85 ~ 110 ▶
Tooltip	<u>Press MENU, Then ↺</u>	◀ Off/On ▶
Exit		◀ ▶

Long press in 3 sec set "**Zebra**" onto one custom function key

[Zebra Setting]

High Area	<u>Press MENU, Then ↺</u>	◀ Off/On ▶
Factor	<u>Press MENU, Then ↺</u>	◀ 128 ~ 255 ▶
Color	<u>Press MENU, Then ↺</u>	◀ Red/Green/Blue/Black/White ▶

Low Area

Press MENU, Then ↺

◀ Off/On ▶

Factor

Press MENU, Then ↺

◀ 0 ~ 128 ▶

Color

Press MENU, Then ↺

◀ Red/Green/Blue/Black/White ▶

Exit



Long press in 3 sec set "**UnderScan**" onto one custom function key

[UnderScan Setting]

Factor	<u>Press MENU, Then ↺</u>	◀ 50 ~ 100 ▶
Exit		◀ ▶

Long press in 3 sec set "**Audio Meters**" onto one custom function key

[Audio Meters Setting]

Audio Meters	<u>Press MENU, Then ↺</u>	◀ Off/On ▶
Audio Channel	<u>Press MENU, Then ↺</u>	◀ 2 Channel/8Channel ▶
Position	<u>Press MENU, Then ↺</u>	◀ Top/Division/Bottom ▶
Exit		◀ ▶

Long press in 3 sec set "**Zooming**" onto one custom function key

[Zooming Setting]

Position	<u>Press MENU, Then ↺</u>	◀ Middle/L+T/R+T/R+B/L+B/User ▶
X Offset	<u>Press MENU, Then ↺</u>	◀ -480 ~ +480 ▶
Y Offset	<u>Press MENU, Then ↺</u>	◀ -270 ~ +270 ▶
Ratio	<u>Press MENU, Then ↺</u>	◀ User/X1.5/X2.2/5/X3 ▶
H:	<u>Press MENU, Then ↺</u>	◀ X1.01 ~ x3.00 ▶
V:	<u>Press MENU, Then ↺</u>	◀ X1.01 ~ x3.00 ▶
Exit		◀ ▶

⚠ The offset value changes along with different input signal resolution.

Long press in 3 sec set "Guides" onto one custom function key

[Guides Setting]

Guides	<u>Press MENU, Then ↗↖</u>	◀ Off/80%/90%/15 : 9/4 : 3/1.5 : 1/ 1.85 : 1/2 : 1/2.35 : 1/Custom ▶
H (Custom)	<u>Press MENU, Then ↗↖</u>	◀ 1%-100% ▶
V (Custom)	<u>Press MENU, Then ↗↖</u>	◀ 1%-100% ▶
Color	<u>Press MENU, Then ↗↖</u>	◀ Red/Green/Blue/Black/White ▶
Thickness	<u>Press MENU, Then ↗↖</u>	◀ 0~50 ▶
Guide Masks	<u>Press MENU, Then ↗↖</u>	◀ Off/On ▶
Exit		◀ ▶

Long press in 3 sec set "Cross Hair" onto one custom function key


[CrossHair Setting]

Crosshair	<u>Press MENU, Then ↗↖</u>	◀ On/Off ▶
Color	<u>Press MENU, Then ↗↖</u>	◀ Red/Green/Blue/Black/White ▶
X Offset	<u>Press MENU, Then ↗↖</u>	◀ 1%-100% ▶
Y Offset	<u>Press MENU, Then ↗↖</u>	◀ 1%-100% ▶
Exit		◀ ▶

Long press in 3 sec set "Waveform" onto one custom function key

[Waveform Setting]

Waveform	<u>Press MENU, Then ↗↖</u>	◀ Off/Full screen/Four screen/ All Types/User Mode ▶									
User Mode	<u>↔↔</u>	Options <u>Press MENU</u>									
Luma Waveform	<u>Press MENU</u>	<table border="0"> <tr> <td>Luma Waveform</td> <td><u>Press MENU, Then ↗↖</u></td> <td>◀ Off/On ▶</td> </tr> <tr> <td>Position</td> <td><u>Press MENU, Then ↗↖</u></td> <td>◀ L+B/M+B/R+B/L+T/ M+T/R+T/L+C/R+C ▶</td> </tr> <tr> <td>Back</td> <td></td> <td>◀ ▶</td> </tr> </table>	Luma Waveform	<u>Press MENU, Then ↗↖</u>	◀ Off/On ▶	Position	<u>Press MENU, Then ↗↖</u>	◀ L+B/M+B/R+B/L+T/ M+T/R+T/L+C/R+C ▶	Back		◀ ▶
Luma Waveform	<u>Press MENU, Then ↗↖</u>	◀ Off/On ▶									
Position	<u>Press MENU, Then ↗↖</u>	◀ L+B/M+B/R+B/L+T/ M+T/R+T/L+C/R+C ▶									
Back		◀ ▶									

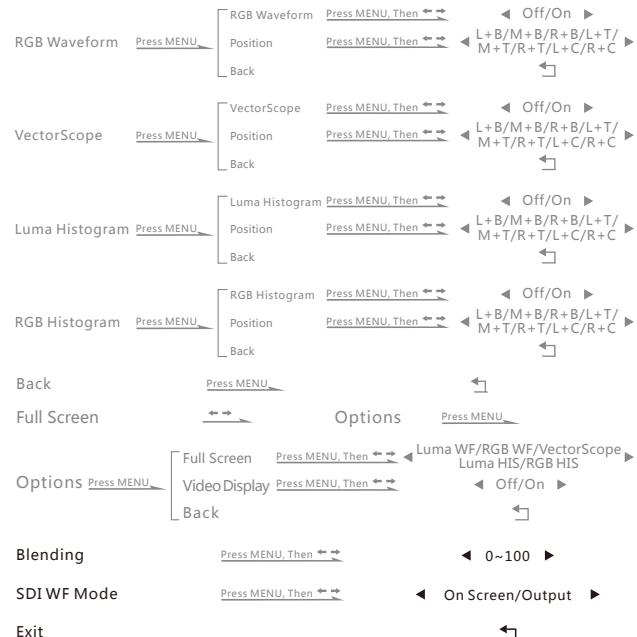

Long press in 3 sec set "HDR Preview" onto one custom function key

[HDR Preview Setting]

HDR Preview	<u>Press MENU, Then ↗↖</u>	◀ On/Off ▶
HDR Range	<u>Press MENU, Then ↗↖</u>	◀ 0~10 ▶

Log formats

Press MENU

- Sony SLog3
- Song SLog2
- Canon CLog
- Canon CLog2
- Canon CLog3
- Red Log3G10
- Pana VLog
- Arri LogC 160
- Arri LogC 200
- Arri LogC 250
- Arri LogC 320
- Arri LogC 400
- Arri LogC 500
- Arri LogC 640
- Arri LogC 800
- Arri LogC 1000
- Arri LogC 1280
- Arri LogC 1600

Gamuts

Press MENU

- Song SGamut
- Sony SGamut3
- Sony SGamut3.cine
- Arri Alexa Wide Gamut
- Panasonic V Gamut
- Red Wide Gamut
- Canon Cinema
- Rec.2020
- DCI-P3 D65
- DCI-P3 Theater

Exit



Press MENU button 3 seconds, appears custom function keys and image configuration information.

This instruction is prepared in accordance with the software version when it leaves factory, with the software upgrading, software operations after upgrade may differ with the instruction, modifications without notice, please have your understanding.

