

## Operating Instructions


### LCD Video Monitor

Model No. **BT-LH1760P**

Model No. **BT-LH1760E**

Model No. **BT-LH1710P**

Model No. **BT-LH1710E**

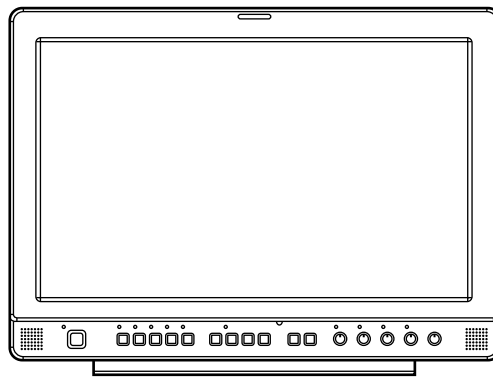

Before operating this product, please read the instructions carefully and save this manual for future use.

# Read this first ! (for BT-LH1760P/1710P)



## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### ■ THIS EQUIPMENT MUST BE GROUNDED

To ensure safe operation, the three-pin plug must be inserted only into a standard three-pin power outlet which is effectively grounded through normal household wiring. Extension cords used with the equipment must have three cores and be correctly wired to provide connection to the ground. Wrongly wired extension cords are a major cause of fatalities. The fact that the equipment operates satisfactorily does not imply that the power outlet is grounded or that the installation is completely safe. For your safety, if you are in any doubt about the effective grounding of the power outlet, please consult a qualified electrician.

### CAUTION:

THE AC RECEPTACLE (MAINS SOCKET OUTLET) SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE. TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER CORD PLUG FROM THE AC RECEPTACLE.

### WARNING:

- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, KEEP THIS EQUIPMENT AWAY FROM ALL LIQUIDS. USE AND STORE ONLY IN LOCATIONS WHICH ARE NOT EXPOSED TO THE RISK OF DRIPPING OR SPLASHING LIQUIDS, AND DO NOT PLACE ANY LIQUID CONTAINERS ON TOP OF THE EQUIPMENT.

### CAUTION:

In order to maintain adequate ventilation, do not install or place this unit in a bookcase, built-in cabinet or any other confined space. To prevent risk of electric shock or fire hazard due to overheating, ensure that curtains and any other materials do not obstruct the ventilation.

### CAUTION:

**TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.**

### CAUTION:

This apparatus can be operated at a voltage in the range of 100 - 240 V AC. Voltages other than 120 V are not intended for U.S.A. and Canada.

### CAUTION:

Operation at a voltage other than 120 V AC may require the use of a different AC plug. Please contact either a local or foreign Panasonic authorized service center for assistance in selecting an alternate AC plug.

### Notice (U.S.A. only):

This product has a fluorescent lamp that contains a small amount of mercury. It also contains lead in some components. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance:

<<http://www.eiae.org>>

### CAUTION:

- Keep the temperature inside the rack to between 41°F to 95°F (5°C to 35°C).
- Bolt the rack securely to the floor so that it will not topple over.

## FCC NOTICE (USA)

### Declaration of Conformity

Model Number: BT-LH1760WP  
Trade Name: PANASONIC  
Responsible Party: Panasonic Corporation of North America  
One Panasonic Way, Secaucus, NJ07094  
Support contact: Panasonic Broadcast & Television Systems Company  
1-800-524-1448

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To assure continued compliance, follow the attached installation instructions and do not make any unauthorized modifications.

### Note:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user may find the booklet "Something About Interference" available from FCC local regional offices helpful.

### Warning:

To assure continued FCC emission limit compliance, the user must use only shielded interface cables when connecting to host computer or peripheral devices. Also, any unauthorized changes or modifications to this equipment could void the user's authority to operate this device.

## IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



S3125A

# Read this first ! (for BT-LH1760E/1710E)

## Operating precaution

Operation near any appliance which generates strong magnetic fields may give rise to noise in the video and audio signals. If this should be the case, deal with the situation by, for instance, moving the source of the magnetic fields away from the unit before operation.

### ■ THIS EQUIPMENT MUST BE EARTHED

To ensure safe operation, the three-pin plug must be inserted only into a standard three-pin power point which is effectively earthed through normal house-hold wiring.

Extension cords used with the equipment must have three cores and be correctly wired to provide connection to the earth. Wrongly wired extension cords are a major cause of fatalities. The fact that the equipment operates satisfactorily does not imply that the power point is earthed or that the installation is completely safe. For your safety, if you are in any doubt about the effective earthing of the power point, please consult a qualified electrician.

### ■ DO NOT REMOVE PANEL COVERS BY UNSCREWING THEM.

To reduce the risk of electric shock, do not remove covers. No user serviceable parts inside.

Refer servicing to qualified service personnel.

#### CAUTION:

THE AC RECEPTACLE (MAINS SOCKET OUTLET) SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.

TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER CORD PLUG FROM THE AC RECEPTACLE.

#### WARNING:

- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, KEEP THIS EQUIPMENT AWAY FROM ALL LIQUIDS. USE AND STORE ONLY IN LOCATIONS WHICH ARE NOT EXPOSED TO THE RISK OF DRIPPING OR SPLASHING LIQUIDS, AND DO NOT PLACE ANY LIQUID CONTAINERS ON TOP OF THE EQUIPMENT.

#### CAUTION:


TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

#### CAUTION:

In order to maintain adequate ventilation, do not install or place this unit in a bookcase, built-in cabinet or any other confined space. To prevent risk of electric shock or fire hazard due to overheating, ensure that curtains and any other materials do not obstruct the ventilation.

#### CAUTION:

- Keep the temperature inside the rack to between 5°C to 35°C.
- Bolt the rack securely to the floor so that it will not topple over.

 indicates safety information.

# Precautions for Use

---

- The LCD screen is manufactured to precise specifications. Although over 99.99% of the pixels function normally, 0.01 of the pixels are either missing or constantly lit (red, blue or green). This is normal and not a cause for concern.
- The liquid crystal protection panel is a specially manufactured component. Wiping it with a hard cloth, or rubbing it vigorously will scratch the surface.
- If a still image is displayed for an extended period of time, it may generate a temporary afterimage (phosphor burn-in). (However, such images can be removed by displaying normal video for a while.)
- The response speed and brightness of liquid crystal vary with ambient temperatures.
- Let authorized service person handle installation.  
Be sure to consult with the service person about the installation. Make sure that the wall or ceiling is strong enough to endure the weight of this unit including the mount fittings. If not strong enough, it may fall off resulting in injury.
- Do not install the unit in a place exposed to direct sunlight, as it may damage the cabinet and the LCD screen.
- Do not install the unit in locations where enough space cannot be provided around it as heat may build up inside preventing normal operation. Be sure to provide enough space around the unit.
- Exposing the LCD screen to intense light sources will impair its characteristics and lower image quality.
- In an environment exposed to drastic temperature fluctuations, condensation may build up on and inside the LCD screen. This may lower the quality of the screen and may damage it.
- Some video images may appear blurred on the screen.
- Leaving the unit in a location exposed to high temperature and humidity for an extended period of time may damage the LCD screen and cause blurring.

## Contents

---

<b>Read this first !</b> .....	<b>2</b>	<b>MARKER</b> .....	<b>15</b>
<b>Precautions for Use</b> .....	<b>5</b>	Types of MARKER .....	16
<b>Standard accessories</b> .....	<b>5</b>	<b>VIDEO CONFIG</b> .....	<b>17</b>
<b>Optional units</b> .....	<b>5</b>	<b>SYSTEM CONFIG</b> .....	<b>18</b>
<b>Outline</b> .....	<b>6</b>	<b>GPI</b> .....	<b>21</b>
<b>Dimensions</b> .....	<b>6</b>	<b>INPUT SELECT</b> .....	<b>22</b>
<b>Controls and Their Functions</b> .....	<b>7</b>	<b>AUDIO</b> .....	<b>23</b>
Video monitor unit .....	7	<b>CONTROL</b> .....	<b>23</b>
Front panel .....	8	<b>REMOTE Specifications</b> .....	<b>24</b>
Rear panel .....	9	<b>How to Attach the Rack mounting</b> .....	<b>28</b>
<b>Power Supply</b> .....	<b>10</b>	<b>Error/Warning Displays</b> .....	<b>28</b>
<b>How to Use the On Screen Menu</b> .....	<b>11</b>	<b>Maintenance</b> .....	<b>28</b>
<b>User Data</b> .....	<b>13</b>	<b>Maintenance Inspections</b> .....	<b>29</b>
<b>Main Menu</b> .....	<b>14</b>	<b>Specifications</b> .....	<b>30</b>
Menu configuration .....	14		

## Standard accessories

---

Power cord x 1  
Power cord hook x 1

Screw x 1

## Optional units

---

**Rack-mounting adaptors** BT-MA1710G (Installation instructions → page 28)  
**Wall hanging bracket** BT-WMA17G (Installation instructions → page 28)  
**LCD protection panel** BT-PRP17G (Installation instructions → page 28)

# Outline

The BT-LH1760 LCD monitor was designed especially for broadcasting service and business use. It is equipped with a high performance 17.0-inch wide LCD display panel.

## ■ High performance LCD panel

This monitor achieves outstanding color reproduction, a wide viewing angle, and high-speed response. The double-speed drive in the BT-LH1760 has substantially reduced image lag.

## ■ Immediate image output of input signals

The time-lag caused by IP field unit conversion\*1 has been eliminated, and the delay from input until image output has been suppressed to the absolute minimum.

\*1 Conversion from interlace to progressive scanning.

## ■ Multi-format image compatibility

- This monitor is equipped with SDI (HD/SD compatible), VIDEO, YP<sub>B</sub>P<sub>R</sub>/RGB, DVI-D (HDCP compatible) input jacks.
- It supports both NTSC and PAL TV broadcast systems.

## ■ A host functions


- Split-screen function  
You can divide the screen into two windows, and compare the windows for critical color matching using the same input terminal and same format.
- Pixel-to-pixel mode  
During HD signal input, use this feature to see video in its native resolution (that is every pixel of the original corresponds to one pixel on the screen).
- Time code display  
During HD SDI input, you can select to display VITC, LTC or UB time code.
- Closed caption  
During VIDEO (NTSC) input, this feature displays the closed caption information embedded in the video signal.
- Waveform and vectorscope display  
This feature shows the waveform (for SDI, VIDEO and YP<sub>B</sub>P<sub>R</sub> inputs) and vectorscope display (for SDI input) of input signals.

## ■ REMOTE control

Depending on the intended use of the monitor, you can select between parallel remote control (GPI) and serial remote control (RS232C).

# Dimensions

Unit : mm (inches)

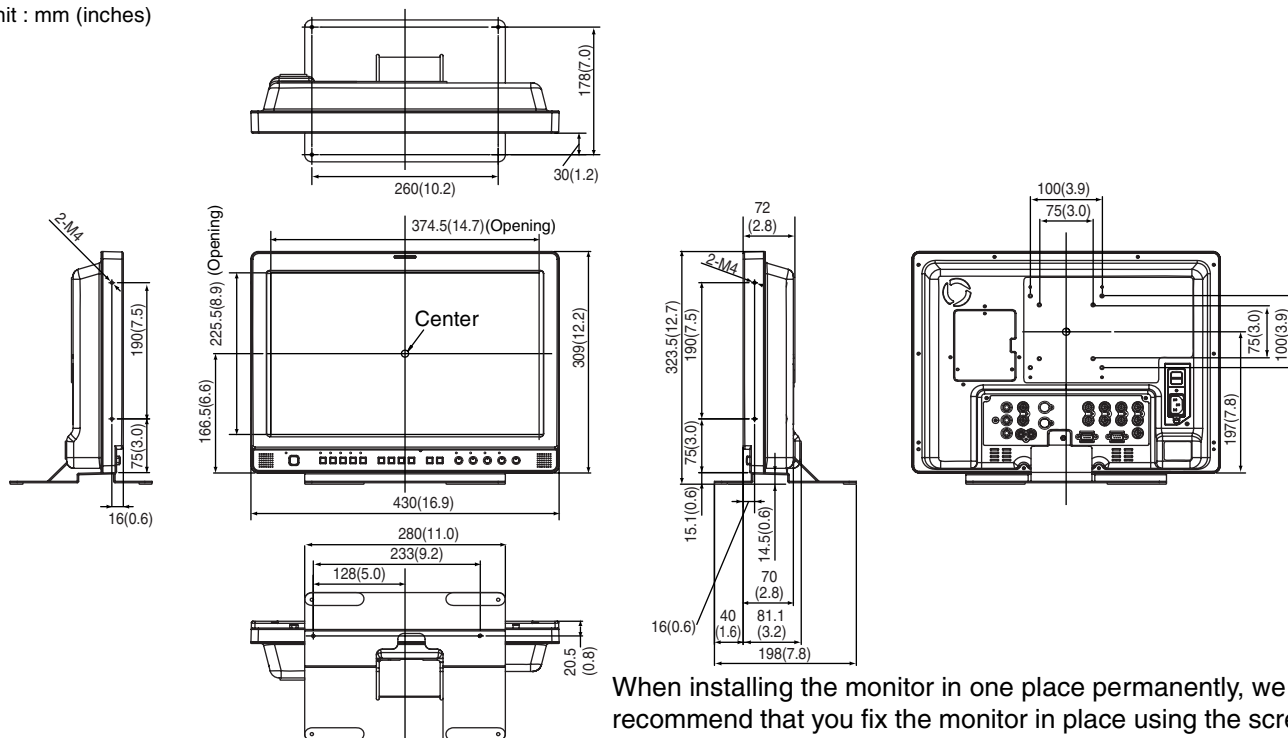


When installing the monitor in one place permanently, we recommend that you fix the monitor in place using the screw holes in the lower part of the stand.

# Controls and Their Functions

## Video monitor unit


Front view

Tally (→ page 21, 24)

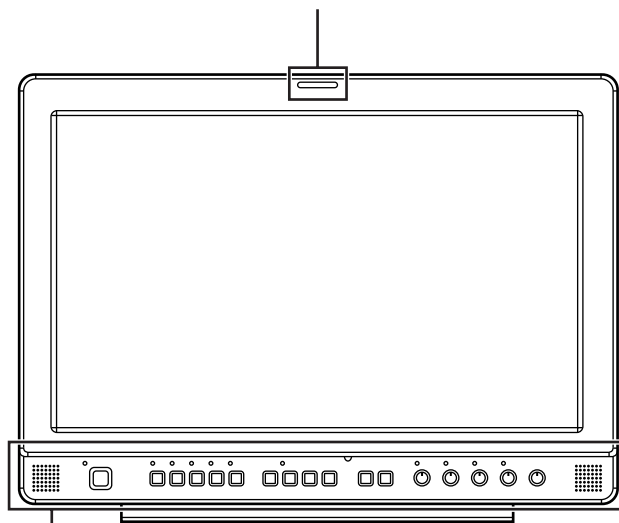

Front panel (→ page 8)

Rear view

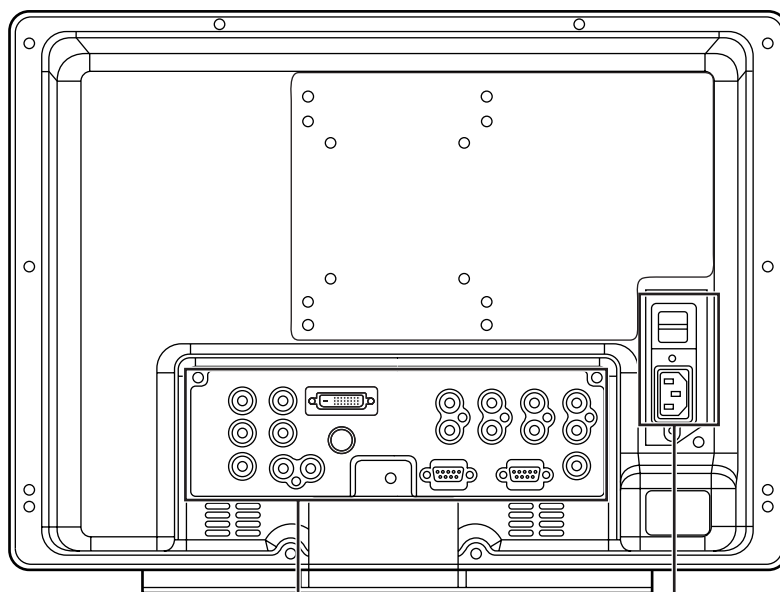


Rear panel (→ page 9)

Power supply [you can switch between AC and DC (→ page 10)]

# Controls and Their Functions (continued)

## Front panel

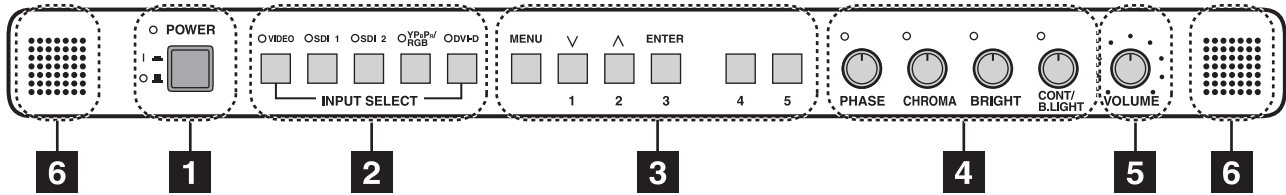

### 1 POWER switch

Switches the power supply ON/OFF. When the power is ON, the LED (green) lights up.

### 2 INPUT SELECT buttons

Selects the signal input line. The green LED light above the button indicates the selected input signal.

- VIDEO : Video input
- Y/C : Y/C input
- SDI1 : Serial digital interface input (HD/SD compatible)
- SDI2 : Serial digital interface input (HD/SD compatible)
- YPbPr/RGB : Analog component (YPbPr) or RGB input. Also compatible with PC input RGB.
  - \* When using PC Input, select "RGB-COMP:" from "YPbPr/RGB" in the "INPUT SELECT" menu (→ page 22).
- DVI-D : DVI-D input (HDCP compatible)
  - \* When using PC Input, select "DVI-COMP:" from "DVI-D" in the "INPUT SELECT" menu (→ page 22).

\* The monitor retains the input signal settings selected when the monitor was last switched ON or OFF.

### 3 MENU, FUNCTION buttons

Use these buttons to display menus, select and adjust settings and confirm menu selections.

- MENU : Press to open a menu, exit a menu or return to a previous menu.
- V/FUNCTION1 : Moves the cursor downwards and selects items.  
It also confirms a menu item assigned to FUNCTION1.
- ^/FUNCTION2 : Moves the cursor upwards and selects items.  
It also confirms a menu item assigned to FUNCTION2.
- ENTER/FUNCTION3 : Press to confirm a setting or to open a submenu.  
It also confirms a menu item assigned to FUNCTION3.
- \* When the control lock is on, the key mark appears and FUNCTION does not operate.
- FUNCTION4 : Confirms a menu item assigned to FUNCTION4.
- FUNCTION5 : Confirms a menu item assigned to FUNCTION5.

### 4 Picture adjusting knob

- PHASE 0 – 60 (30)
- CHROMA 0 – 60 (30)
- BRIGHT 0 – 60 (30)
- CONT[CONTRAST] 0 – 60 (50) / B.LIGHT [BACKLIGHT] 0 – 60 (50)

( ) denotes factory preset values.

A rotating knob that can be pushed to operate. You can display and adjust the menu settings by pushing the knob. The setting values are saved by pushing the knob again.

When values are changed from the factory preset values, the LED above the knob (amber) lights.

The setting values are loaded when the monitor's power is switched ON. The setting values are saved when the knob is pushed, or when 10 seconds pass after changing the settings. However, operating changes cannot be made in the following cases.

- \* When the control lock is on, the key mark appears and setting values cannot be changed (→ page 23).
- \* When the MONO function is ON (→ page 17), [PHASE] and [CHROMA] operations are disabled.
- \* When using "RGB-COMP:" input, [PHASE] and [CHROMA] operations are disabled.
- \* While operating HV DELAY (→ page 18) (when set to any other setting than OFF), [BRIGHT] operation is disabled.

### 5 Volume knob

You can adjust the speaker and headphones volume by rotating the volume knob.

### 6 Speaker


Audio input from the AUDIO input terminal or SDI terminal (embedded audio) can be heard.

Connecting headphones to the HEAD PHONE output connector turns off the speakers.



# Controls and Their Functions (continued)

## Rear panel

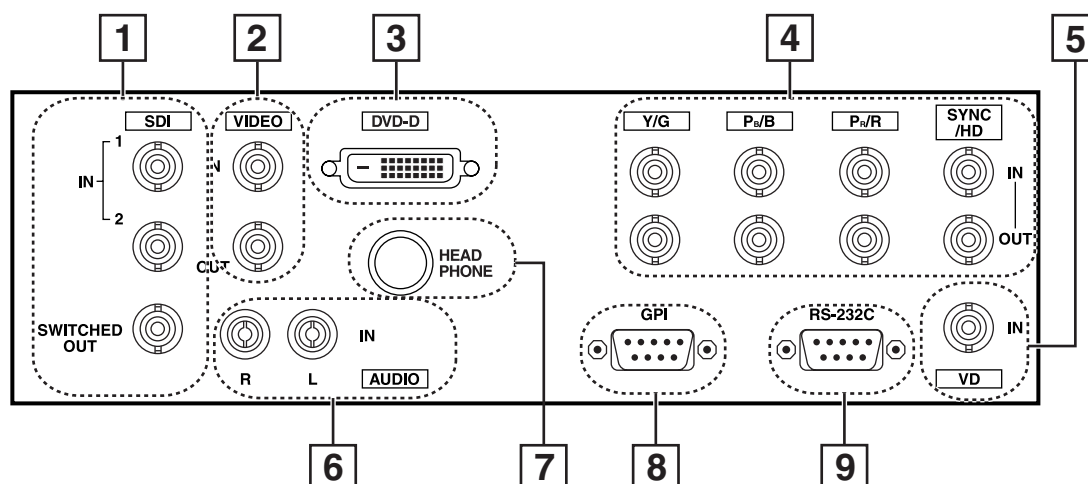

### 1 SDI (HD/SD) terminal (BNC)

IN1 : This is the SDI input terminal (compatible with HD/SD automatic switching).

IN2 : This is the SDI input terminal (compatible with HD/SD automatic switching).

SWITCHED OUT : This is the active through-out terminal for the SDI input signal being displayed on the screen.

\* SDI active through-out is only output when [SDI1] or [SDI2] is selected using the [INPUT SELECT] buttons. It is not output when anything other than SDI is selected. This terminal supports embedded audio.

When multiple monitors are connected in a daisy chain\* pattern using the SDI active through-out, flicker or noise may occur on the screen, depending on the quality of the original signal, length of cables or the number of monitors connected.

\* **Daisy chain connection:**

This is a connection method for distributing a signal to two or more devices by connecting the through-out terminal of the first device to an input terminal of the second device, the through-output terminal of the second device to an input terminal of the third device, and so on.

### 2 VIDEO terminal (BNC)\*1\*2

IN : This is the VIDEO signal (composite signal) input terminal.

OUT : This is the input signal through-out terminal.

### 3 DVI-D terminal

An HDCP compliant DVI-D signal input terminal.

### 4 YPbPr/RGB terminal (BNC)\*1\*2

IN : This is the YPbPr/RGB signal input terminal.

OUT : This is the input signal through-out terminal.

\* When using the RGB signal, you can also connect the external synchronizing signal to the SYNC/HD terminal. When using a PC RGB signal, connect the horizontal synchronizing signal to the SYNC/HD terminal, and the vertical synchronizing signal to the VD terminal.

### 5 VD IN input terminal

This is the vertical synchronizing signal (VD) input terminal used when connecting to a PC RGB signal.

### 6 AUDIO input terminal (Pin terminal)

This is the common audio input terminal for all video input terminals.

\* SDI input audio is automatically selected by selecting [SDI1] or [SDI2] with [INPUT SELECT].

### 7 HEAD PHONE output connector (Stereo mini-jack M3)

Connect a pair of headphones to monitor the sound.

\* The sound volume and sound quality will depend on the headphones. Note that plugging in a pair of headphones turns off the speakers.

### 8 GPI input terminal (D-SUB 9-pin)

External control is possible by using a GPI signal.

### 9 RS232C input terminal (D-SUB 9-pin)

External control is possible by using a RS232C signal.


\*1 Unless a cable is connected to the OUT terminal, the VIDEO IN terminal is automatically terminated at 75Ω. Connecting a cable releases this termination.

\*2 Since a connection to the through-out terminal releases the 75Ω termination of the unit, the level of the video signal input to the unit may become too large depending on the connected device.

# Power Supply

## Connecting and fixing the power cord


### 1. Attach the power cord to the monitor unit.

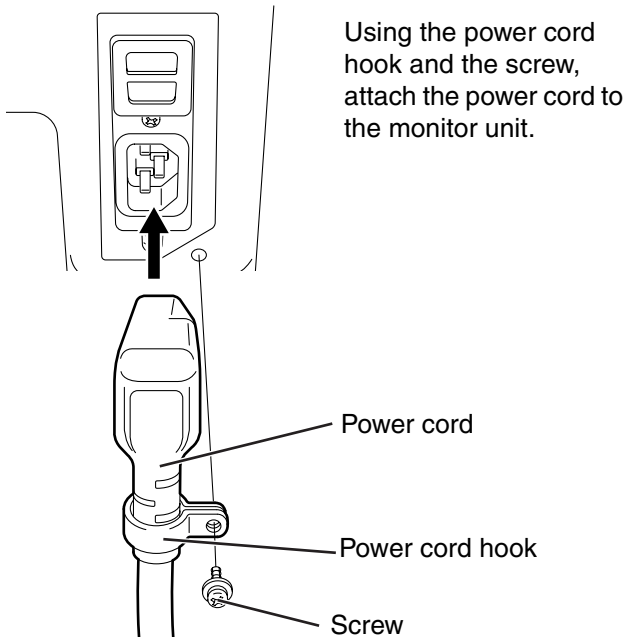

### 2. Connect the power cord to the power outlet.

### ■ When using external DC power (DC11V-17V)

You can slide open the power cover, and switch from AC input to external DC input. (When shipped from the factory, the power cover is up, and AC input is selected.)

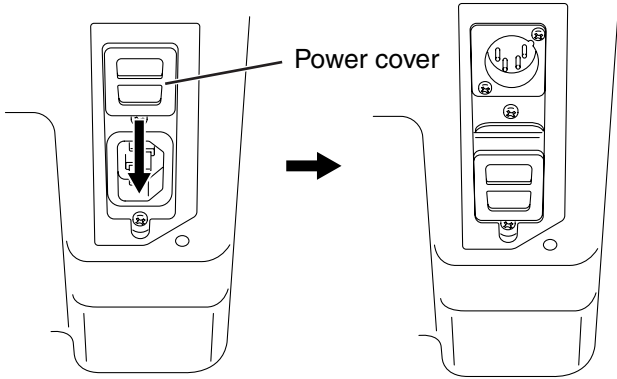

### Please note the following

If the power cover has been removed or opened, do not use the monitor with the power supply connected to both the AC input and external DC input terminals.

When using external DC power (DC11V-17V), check the external DC input terminal pin signal, and use the correct polarity. If a +12V power supply is accidentally connected to the GND terminal, this could cause a fire or personal injury.

	Pin number	Signal
	1	GND
	2, 3	—
	4	+12V


External DC input terminal

# How to Use the On Screen Menu

Three types of information are displayed on the screen. The input signal status, picture adjusting knob status, and the menu display.

When using an external DC power connection, a “LOW VOLTAGE” warning may be displayed (→ page 28). The display position is the same as the “Input signal status”.

## Input signal status

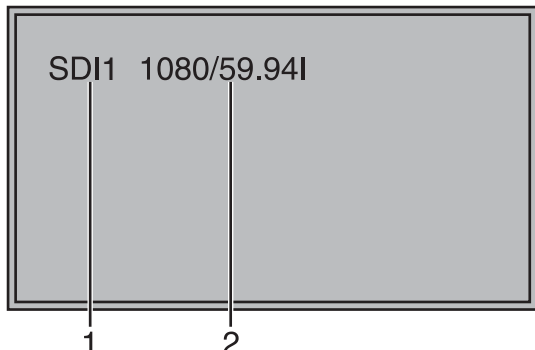

### 1. The selected input line (→ page 8, 2)

- VIDEO, Y/C, SDI1, SDI2, YPbPr/RGB-VIDEO/RGB-COMP.


### 2. Signal format

- The display status can be set in “STATUS DISPLAY” in the “SYSTEM CONFIG” menu (→ page 19).
- If “UNSUPPORT SIGNAL” is displayed, then either the current input signal is not supported or the “INPUT SELECT” menu setting needs to be changed.
- When “NO SIGNAL” is displayed, there is no input signal.

#### Note:

“UNSUPPORT SIGNAL” and “NO SIGNAL” may not be displayed correctly.

## Picture adjusting knob status

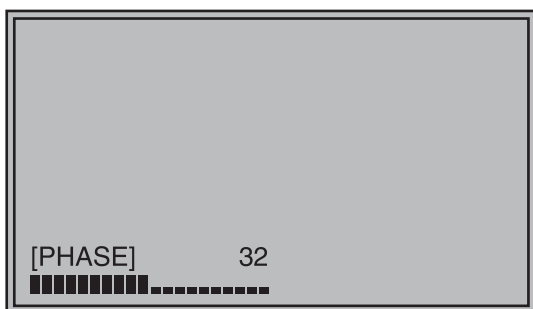

### Picture adjusting knob (→ page 8, 5)

- This knob can be rotated and pushed.
- The status display appears when the knob is pushed. The display disappears when the knob is pushed again, or if the knob is not operated for 10 seconds.
- Settings can only be adjusted in the status display.
- The display position can be changed (→ page 19 “ROTARY POSITION”).


Status display:

PHASE, CHROMA, BRIGHT, CONTRAST

#### Note:

The volume knob status display is not displayed on the screen.

## Menu display

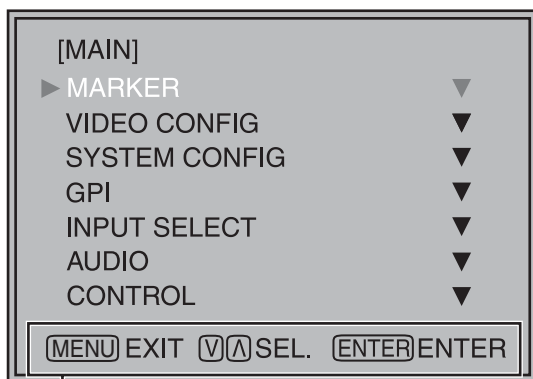


- This is displayed when the menu is used.
- The display disappears if remains idle for 2 minutes.
- The display position can be changed (→ page 19 “MENU POSITION”).

Displays the operation explanation for the menu button.

# How to Use the On Screen Menu (continued)

## Menu operations

1. Push [MENU] to display the MAIN menu.

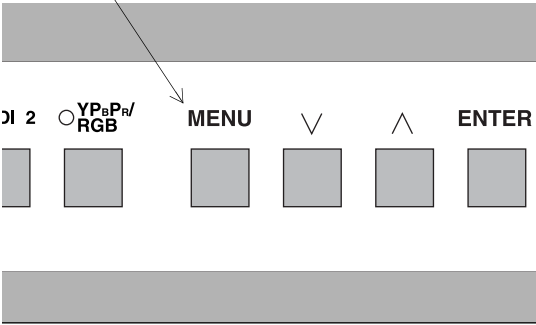


2. Push [V, ^] to select the menu, then push [ENTER].




3. Push [V, ^] to select the sub menu, then push [ENTER].

The setting values in the sub menu change to green.

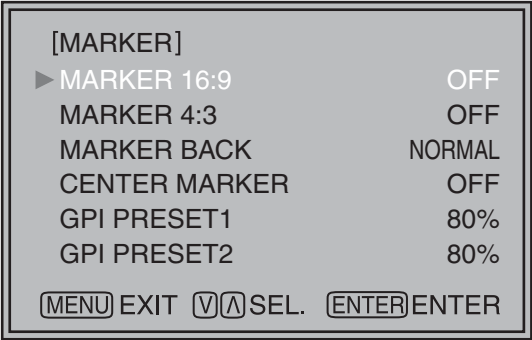

4. Push [V, ^] to select the setting values, then push [ENTER].

Push [MENU] to cancel.

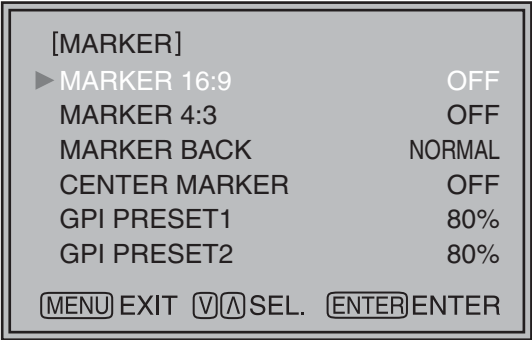

### To return to the previous screen

Push [MENU].

# User Data

You can change the menu setting values and picture adjusting knob settings, then save and load up to 5 combinations of screen adjustment values as user data. You can also return the setting values and adjustment values to the factory preset settings.


The following settings are included in user data.

- Menu settings except for “SETUP LOAD/SAVE” (including the button function settings on the front of the monitor)
- Screen adjustment values changed in picture adjusting knob

## Saving user data

1. Push [MENU] to display the MAIN menu.
2. Push [V, ^] to select the “SYSTEM CONFIG” menu and push [ENTER].
3. Push [V, ^] to select the “SETUP SAVE” sub menu and push [ENTER].


The setting values in the sub menu change to green.

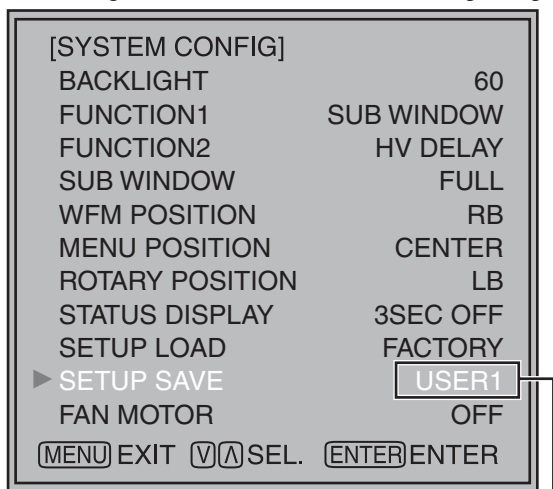

Changes to green

4. Push [V, ^] to select the file you wish to save to from “USER1” – “USER5”, then push [ENTER].

The following screen appears.

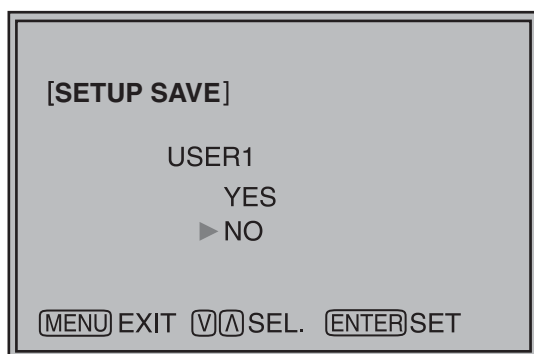


5. Select “YES”, and push [ENTER].

The user data is saved.

## Loading user data

1. Push [MENU] to display the MAIN menu.
2. Push [V, ^] to select the “SYSTEM CONFIG” menu and push [ENTER].
3. Push [V, ^] to select the “SETUP LOAD” sub menu and push [ENTER].

The setting values in the sub menu change to green.

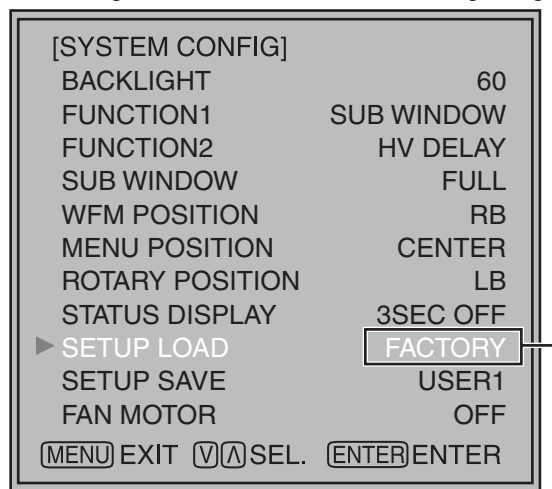


Changes to green

4. Push [V, ^] to select the file you wish to load to from “USER1” – “USER5”, then push [ENTER].

The following screen appears.

To return to the factory preset setting values, select “FACTORY”.

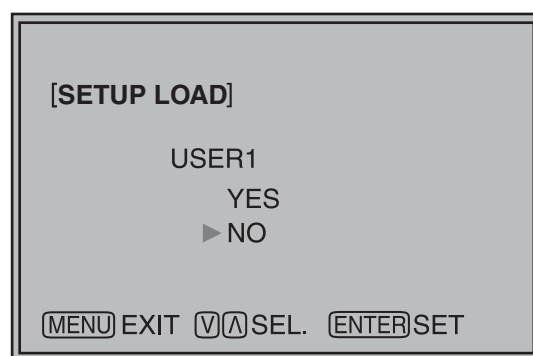


5. Select “YES”, and push [ENTER].

The user data is loaded.

**To return to the previous screen**

Push [MENU].

# Main Menu

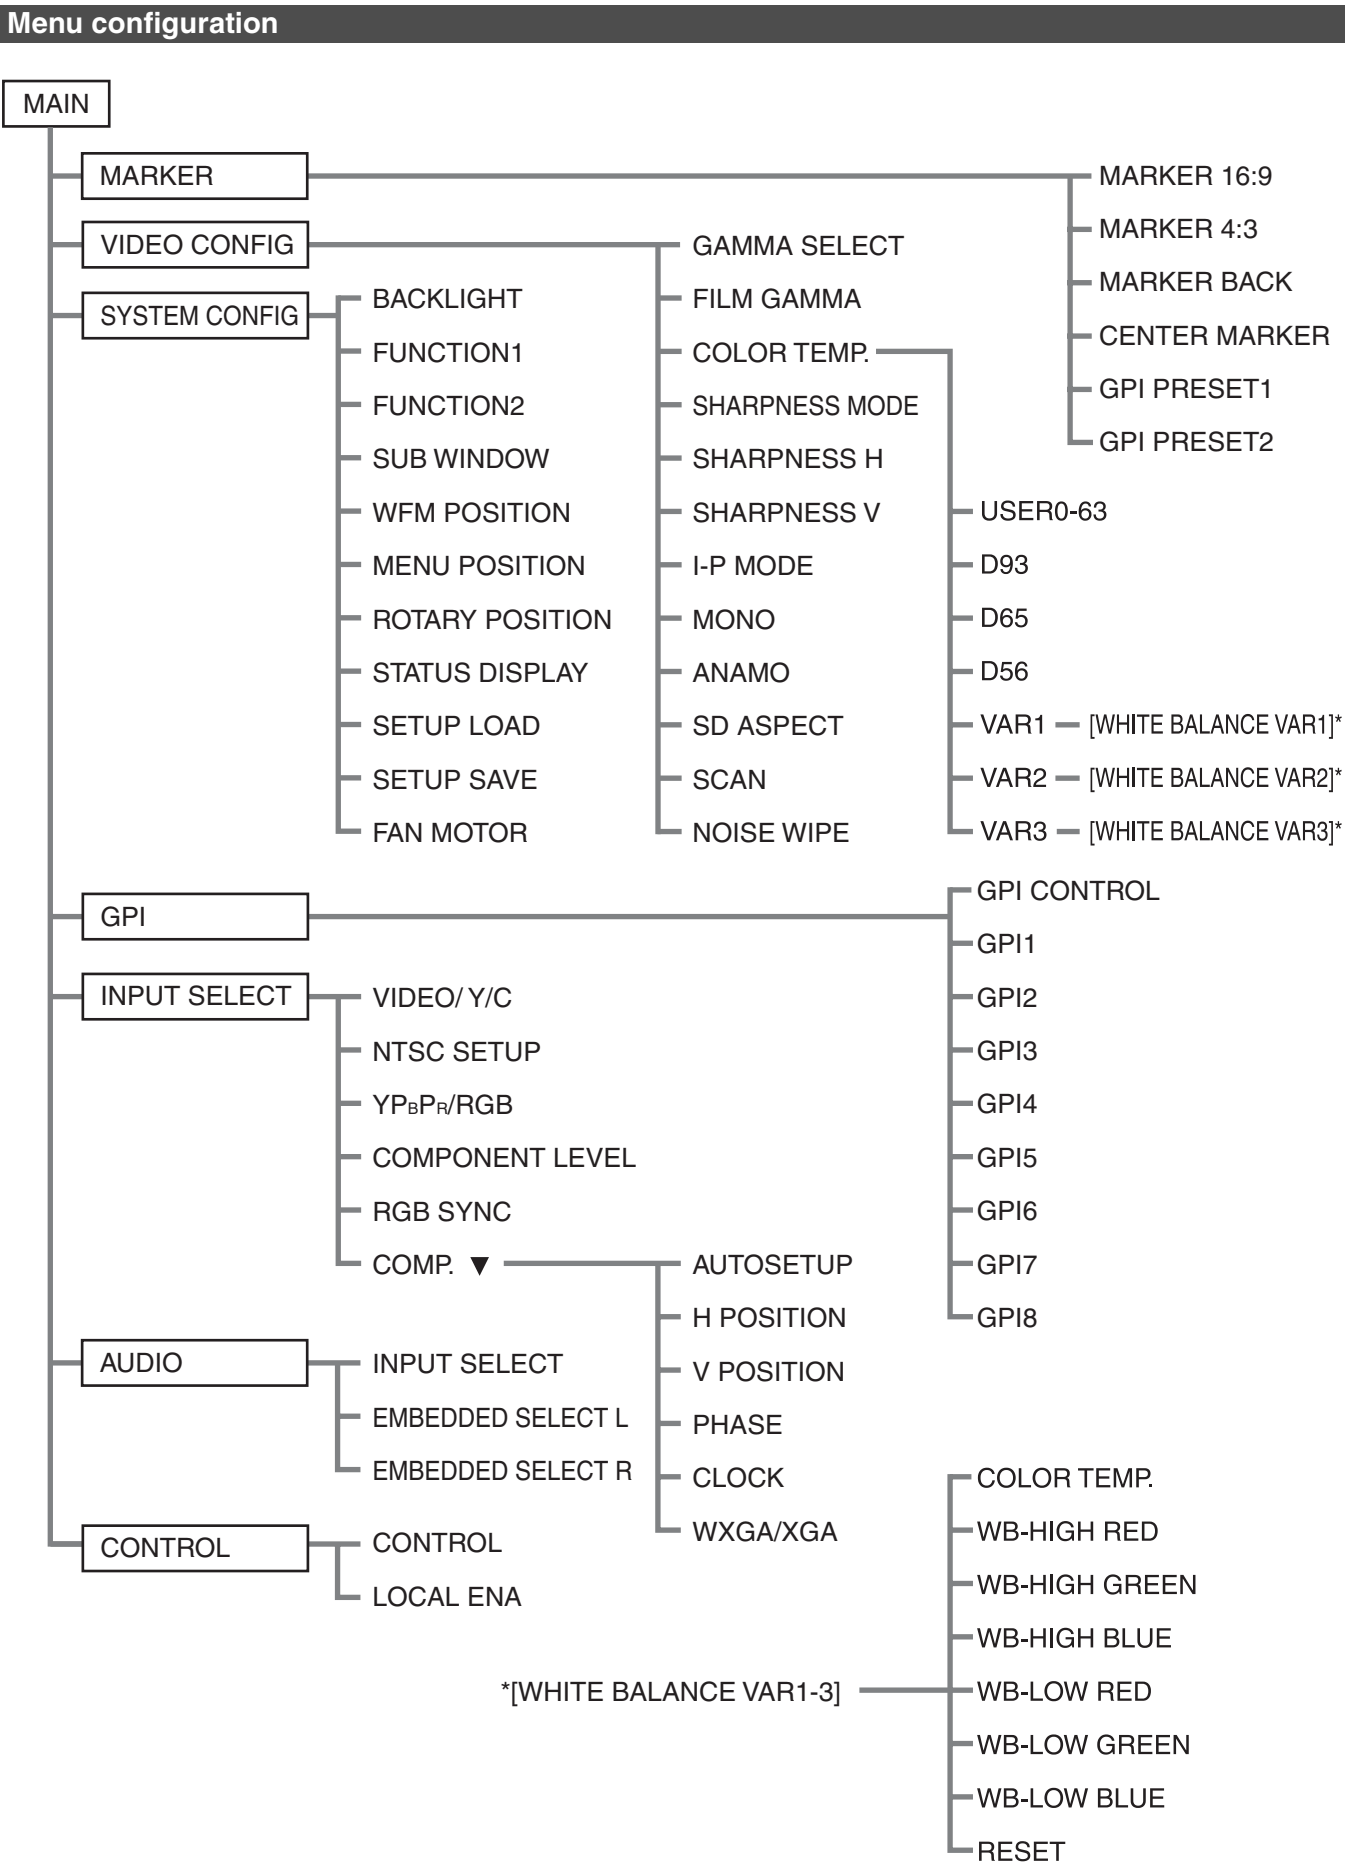

## Main Menu (continued)

### MARKER

The underlined values are factory preset setting values.


Sub menu	Settings	Explanation
<b>MARKER 16:9</b> <sup>*1*2</sup>	<u>&lt;OFF&gt;</u> <4:3 > <13:9> <14:9> <CNSCO> <VISTA> <95%> <93%> <90%> <88%> <80%>	Used to select/display the type of marker when the aspect ratio setting is 16:9.  <OFF> Marker not displayed. <4:3> 4:3 marker                      <13:9> 13:9 marker <14:9> 14:9 marker                <CNSCO> CNSCO marker <VISTA> VISTA marker            <95%> 95% Area marker <93%> 93% Area marker          <90%> 90% Area marker <88%> 88% Area marker          <80%> 80% Area marker
<b>MARKER 4:3</b> <sup>*1*3</sup>	<u>&lt;OFF&gt;</u> <95%> <93%> <90%> <88%> <80%>	Used to select/display the type of marker when the aspect ratio setting is 4:3.  <OFF> Marker not displayed. <95%> 95% Area marker            <93%> 93% Area marker <90%> 90% Area marker            <88%> 88% Area marker <80%> 80% Area marker
<b>MARKER BACK</b> <sup>*1</sup>	<u>&lt;NORMAL&gt;</u> <HALF> <BLACK>	Used to select the background brightness excluding the marker. <NORMAL> Normal background <HALF> Background brightness 50% <BLACK> Background brightness 0% (Black)
<b>CENTER MARKER</b> <sup>*1</sup>	<u>&lt;OFF&gt;</u> <ON>	Used to display the center marker. <OFF> Not displayed <ON> Displayed
<b>GPI PRESET1</b>	<4:3 > <13:9> <14:9> <CNSCO> <VISTA> <95%> <93%> <90%> <88%> <u>&lt;80%&gt;</u>	Used to select the marker to be displayed using the GPI terminal "MARKER1 ON/OFF" operation (→ page 24).  <4:3> 4:3 marker                      <13:9> 13:9 marker <14:9> 14:9 marker                <CNSCO> CNSCO marker <VISTA> VISTA marker            <95%> 95% Area marker <93%> 93% Area marker          <90%> 90% Area marker <88%> 88% Area marker          <80%> 80% Area marker
<b>GPI PRESET2</b>	<4:3 > <13:9> <14:9> <CNSCO> <VISTA> <95%> <93%> <90%> <88%> <u>&lt;80%&gt;</u>	Used to select the marker to be displayed using the GPI terminal "MARKER2 ON/OFF" operation (→ page 24).  <4:3> 4:3 marker                      <13:9> 13:9 marker <14:9> 14:9 marker                <CNSCO> CNSCO marker <VISTA> VISTA marker            <95%> 95% Area marker <93%> 93% Area marker          <90%> 90% Area marker <88%> 88% Area marker          <80%> 80% Area marker

\*1 When controlling the marker settings using the GPI function (→ page 24), these settings become disabled. These are not operated when the 2 screens are displayed.

\*2 These are only enabled when the HD signal and SD signal aspect ratio settings are 16:9.

\*3 These are only enabled when the SD signal aspect ratio setting is 4:3.

Types of MARKER

■ **16:9 marker**  
(Displayed when using HD, or when using SD with a 16:9 aspect ratio)  
The marker is only displayed as a vertical bar. In addition, the  section becomes the “MARKER BACK” item.



4:3 marker



13:9 marker

 


14:9 marker

**VISTA marker, CNSCO marker**  
A horizontal dotted line is displayed as the marker.




VISTA marker




CNSCO marker

When “UNDER” is set in “SCAN” in the “VIDEO CONFIG” menu, a vertical dotted line is also displayed as the marker.

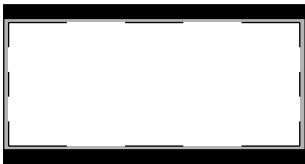

VISTA marker

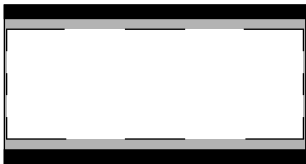

CNSCO marker


**Area marker**  
A dotted line is displayed as the marker.



95% Area marker



93% Area marker

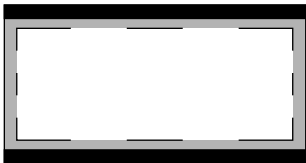

90% Area marker




88% Area marker




80% Area marker


■ **4:3 marker**  
(Displayed when using SD with a 4:3 aspect ratio)  
A dotted line is displayed as the marker.

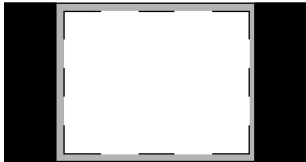


95% Area marker

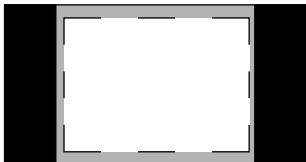


93% Area marker

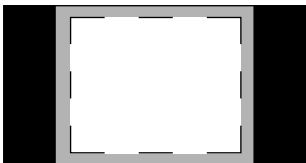

90% Area marker

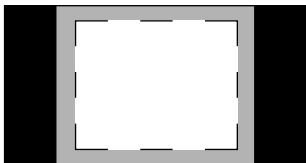


88% Area marker

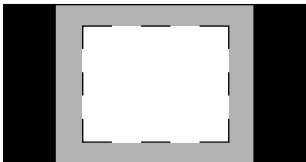

80% Area marker

 ■ **Center marker**  
The marker is displayed in the center of the picture.




Center marker



# Main Menu (continued)

## VIDEO CONFIG

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
<b>GAMMA SELECT</b> <sup>*2</sup>	<u>&lt;NORMAL&gt;</u> <FILM> <sup>*1</sup>	Used to select the gamma curve. When FILM is selected,  <b>FILM</b> mark is displayed in the top left of the screen.
<b>FILM GAMMA</b> <sup>*2</sup>	<u>&lt;VARICAM&gt;</u> <OTHER>	Used to select the type of FILM gamma mode. <VARICAM> VARICAM use <OTHER> When using other types than VARICAM
<b>COLOR TEMP.</b>	<USER0-63> <sup>*5</sup> <D93> <u>&lt;D65&gt;</u> <D56> <VAR1> <VAR2> <VAR3>	Used to select the color temperature. <USER0-63> Adjustable settings 0-63 (color temperature around 3000K-9300K) <D93> Color temperature around 9300K <D65> Color temperature around 6500K <D56> Color temperature around 5600K <VAR1> WB adjustment mode <sup>*4</sup> <VAR2> WB adjustment mode <sup>*4</sup> <VAR3> WB adjustment mode <sup>*4</sup>
<b>SHARPNESS MODE</b> <sup>*2</sup>	<HIGH> <sup>*3</sup> <LOW>	Used to select the width of the sharpness edge. <HIGH> Thin edge      <LOW> Thick edge
<b>SHARPNESS H</b> <sup>*2</sup>	<0-30> <sup>*3</sup>	Used to set the sharpness in the horizontal direction. When adjusting, the item display moves to the lower part of the screen.
<b>SHARPNESS V</b> <sup>*2</sup>	<0-30> <sup>*3</sup>	Used to set the sharpness in the vertical direction. When adjusting, the item display moves to the lower part of the screen.
<b>I-P MODE</b> <sup>*2*6</sup>	<MODE2> <u>&lt;MODE1&gt;</u>	Used to set the mode for IP change. <MODE2> Field Interpolation      <MODE1> Frame Interpolation
<b>MONO</b> <sup>*2</sup>	<u>&lt;OFF&gt;</u> <ON>	Used to switch between color and monochrome (MONO). <OFF> Color      <ON> Monochrome * When this is ON, the picture adjusting knob [CHROMA] setting is fixed at 0.
<b>ANAMO</b> <sup>*2</sup>	<u>&lt;OFF&gt;</u> <ON>	If an Anamo lens has been used on the camera, and input through SDI 720/60P, 59.94P, the picture is resized to Anamo size magnification. (a vertically compressed signal can be amplified vertically and corrected when it is displayed.)
<b>SD ASPECT</b> <sup>*2</sup>	<u>&lt;4:3&gt;</u> <16:9>	Used for setting the aspect ratio settings when using SD signal input. <4:3> 4:3 display      <16:9> 16:9 display
<b>SCAN</b> <sup>*2</sup>	<u>&lt;NORMAL&gt;</u> <UNDER>	Used to set under-scan and normal display. <NORMAL> Normal display      <UNDER> Under-scan
<b>NOISE WIPE</b> <sup>*2</sup>	<OFF> <u>&lt;ON&gt;</u>	<OFF> This makes a fluid and smooth contrast obtainable. This is especially effective for continuously changing the contrast of the source signal or CG signal when the S/N is very high. <ON> Noise reduction mode. Depending on the camera, this mode can be especially effective for dark scenes. We recommend leaving this setting "ON" under normal conditions.

\*1 Even if FILM gamma is changed during 2 screen display, only the main window is set, and the changes are not reflected in the sub window.

\*2 When "RGB-COMP" is selected in "YPbPr/RGB" in the "INPUT SELECT" menu (→ page 22), this does not operate.

\*3 The following sharpness values can each be set,

1) VIDEO system input line (VIDEO,Y/C)(Factory settings are SHARPNESS MODE : LOW, SHARPNESS H/V : 0)

2) any other input line's HD (Factory settings are SHARPNESS MODE : HIGH, SHARPNESS H/V : 0)

3) any other input line's SD (Factory settings are SHARPNESS MODE : LOW, SHARPNESS H/V : 0)

and the setting values for the selected input signal from within this group is displayed. The adjustment status is displayed in the bottom right when selected.

\*4 When "VAR1", "VAR2" or "VAR3" is selected, the monitor switches to WB adjustment mode (→ page 18).

\*5 When selecting USER0-63

1) Push [ENTER] (USER changes to blue).

2) Select 0-63 with [V, ^], and push [ENTER].

\*6 By selecting "MODE1", you can convert IP through Frame Interpolation.

This unit has reduced the Frame Interpolation delay to 1 field or less, compared to our old models having caused 1 frame delay or more.

Factory preset setting value is "MODE1" recommended for normal use.

By selecting "MODE2", you can convert IP through Field Interpolation.

Since MODE2 interpolates only within each Field, it is suitable to confirm interlace condition.

Depending on still images, etc., flickers may occur on the screen. In such a case, "MODE1" is recommended.

## Main Menu (continued)

### ■ WB adjustment mode

You can adjust “WHITE BALANCE VAR1” – “WHITE BALANCE VAR3” (WB) by selecting “VAR1” – “VAR3” in “COLOR TEMP.” in the “VIDEO CONFIG” menu.

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
<b>COLOR TEMP.</b>	<USER0–63> <D93> <D65> <D56>	Used to select the color temperature that will become the basis for adjustments. <USER0–63> Adjustable settings 0–63 (color temperature around 3000K–9300K) <D93> Color temperature around 9300K <D65> Color temperature around 6500K <D56> Color temperature around 5600K
<b>WB-HIGH RED</b>	<0–60> (Factory preset settings: 30)	Used to adjust the WB in the HIGH level R component.*1
<b>WB-HIGH GREEN</b>		Used to adjust the WB in the HIGH level G component.*1
<b>WB-HIGH BLUE</b>		Used to adjust the WB in the HIGH level B component.*1
<b>WB-LOW RED</b>		Used to adjust the WB in the LOW level R component.*1
<b>WB-LOW GREEN</b>		Used to adjust the WB in the LOW level G component.*1
<b>WB-LOW BLUE</b>		Used to adjust the WB in the LOW level B component.*1
<b>RESET</b>		This returns the “WB-HIGH RED” – “WB-LOW BLUE” settings to the factory presets.

\*1 When adjusting, the item display moves to the lower part of the screen.

## SYSTEM CONFIG

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
<b>BACKLIGHT</b>	< 0– <u>60</u> >	Used to adjust the brightness of the liquid crystal backlight.
<b>FUNCTION1</b>	<HV DELAY> <AUTOSETUP> <BLUE ONLY> <GAMMA SELECT> <SD ASPECT> <SCAN> <SUB WINDOW> <UNDEF>	Used to select the functions assigned to [FUNCTION1] and [FUNCTION2] (front buttons). <HV DELAY>*2 Displays the synchronizing signal (horizontal, vertical). The display is switched in the following order. OFF → H-Delay → V-Delay → HV-Delay → OFF <AUTOSETUP>*5 Used to automatically adjust the PC display. <BLUE ONLY>
<b>FUNCTION2</b>	<HV DELAY> <AUTOSETUP> <BLUE ONLY> <GAMMA SELECT> <SD ASPECT> <SCAN> <SUB WINDOW> <UNDEF>	Used to cut the red and green signals. You can check the hue (PHASE) and depth of color (CHROMA). This is switched between ON/OFF by pushing the button. <GAMMA SELECT> You can switch between “NORMAL” and “FILM”.*3*4 <SD ASPECT> Used to switch between “16:9” and “4:3”.*3*4 <SCAN> You can switch between “UNDER” and “NORMAL”.*3*4 <SUB WINDOW> You can perform the settings for 2 screen display mode.*3*4*6 <UNDEF> No settings

\*2 This function is disabled while in 2 screen display mode.

\*3 These functions are disabled when the control settings are in GPI mode.

\*4 If these settings are changed, the menu settings will also change.

\*5 When “RGB-COMP.” is not selected in “YPbPr/RGB” in the “INPUT SELECT” menu, “NOT RGB-COMP.CH.” is displayed, and this does not operate.

\*6 This function will not work when “RGB-COMP.” is selected in “YPbPr/RGB” in the “INPUT SELECT” menu.

## Main Menu (continued)

### SYSTEM CONFIG

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
<b>SUB WINDOW</b>	<u>&lt;FULL&gt;</u> <PART> <WFM>	Used to select the type of sub window. <FULL> Used to reduce the whole input signal screen, and arrange it horizontally when it is displayed. <PART> Used to cut out the central section of the input signal screen, and arrange it horizontally when it is displayed (Displayed at the same size as the previous screen). <WFM> Used to display the waveform display screen.*3
<b>WFM POSITION</b>	<LB> <u>&lt;RB&gt;</u> <RT> <LT>	Used to set the WFM display position. <LB> Bottom left of the screen    <RB> Bottom right of the screen <RT> Top right of the screen    <LT> Top left of the screen
<b>MENU POSITION</b>	<u>&lt;CENTER&gt;</u> <LB> <RB> <RT> <LT>	Used to set the on screen menu display position. <CENTER> Center of the screen <LB> Bottom left of the screen    <RB> Bottom right of the screen <RT> Top right of the screen    <LT> Top left of the screen
<b>ROTARY POSITION</b>	<CENTER> <u>&lt;LB&gt;</u> <RB> <RT> <LT>	Used to set the picture adjusting knob status (on screen menu) display position. <CENTER> Center of the screen <LB> Bottom left of the screen    <RB> Bottom right of the screen <RT> Top right of the screen    <LT> Top left of the screen
<b>STATUS DISPLAY</b>	<CONTINUE> <u>&lt;3SEC OFF&gt;</u> <OFF>	Used to set the input signal status (on screen menu) display status. <CONTINUE> Displayed normally. <3SEC OFF> After changing status, it is displayed for approximately 3 seconds, and then disappears. <OFF> Not displayed.
<b>SETUP LOAD</b>	<u>&lt;FACTORY&gt;</u> <USER1>*1*2 <USER2>*1*2 <USER3>*1*2 <USER4>*1*2 <USER5>*1*2	The saved factory preset setting values (FACTORY) or the user data (USER 1–USER 5) are loaded. Also after loading user data, the screen displays the signal selected before loading data.
<b>SETUP SAVE</b>	<u>&lt;USER1&gt;</u> *2 <USER2>*2 <USER3>*2 <USER4>*2 <USER5>*2	Up to 5 sets of user data can be saved (→ page 13). The menu settings and picture adjusting knob adjustment values (PHASE /CHROMA /BRIGHT /CONTRAST) excluding “SETUP SAVE/ SETUP LOAD” are saved.
<b>FAN MOTOR</b>	<u>&lt;OFF&gt;</u> <ON>	Used to set fan operation. <OFF> The fan is stopped. The brightness of the backlight automatically lowers. <ON> The fan operates. The backlight brightness returns to normal.

\*1 When the monitor is shipped from the factory, “USER1” – “USER5” and “FACTORY” all have the same details.

\*2 You cannot save or load the settings for “H POSITION”, “V POSITION”, “PHASE” and “CLOCK” (→ page 22).

\*3 This screen is not displayed when “RGB-COMP.” is selected in the “YP<sub>B</sub>Pr/RGB” menu in the “INPUT SELECT” menu.

#### ■ About H/V DELAY

This displays the video blanking period. By pushing the button, you can switch through the H blanking display → V blanking display → H and V blanking display → no blanking display.

## Main Menu (continued)

### ■ About the SUB WINDOW


You can compare saved still and moving images or show the Wave Form Monitor (WFM) by using the “SUB WINDOW” function to separate the main window into 2 displays as shown below.

Depending on the settings of the “SUB WINDOW” (FULL, PART, WFM) in the “SYSTEM CONFIG” menu (→ page 19) it can be switched as shown below.

Every time you press the [FUNCTION1] (or [FUNCTION2]) button (→ page 18) assigned to the “SUB WINDOW” function, the window switches (To use the “SUB WINDOW” function, assign it to [FUNCTION1] or [FUNCTION2]).


#### • FULL

The main window is reduced and made into 2 sub window (sub window+sub window).

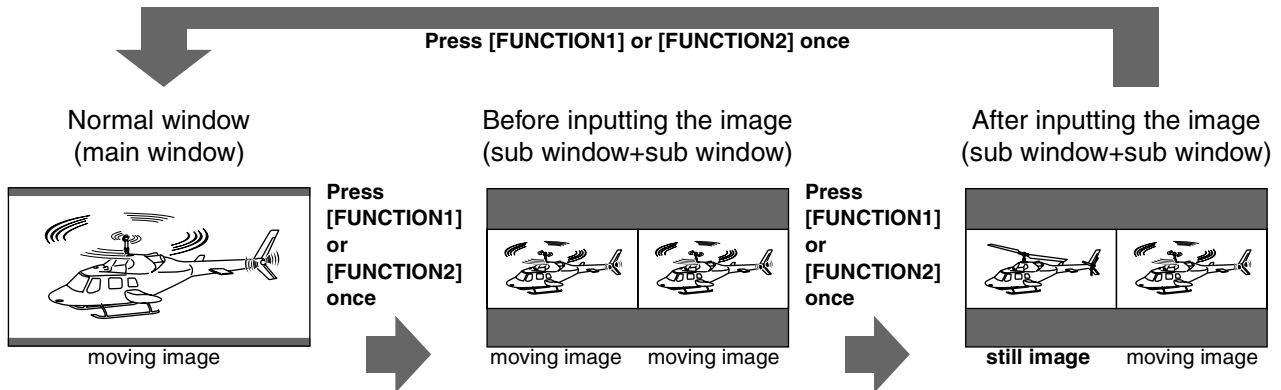


#### • PART

Only the sub window size is cut out of the main window, and the cut section is made into 2 sub window images (sub window+sub window).

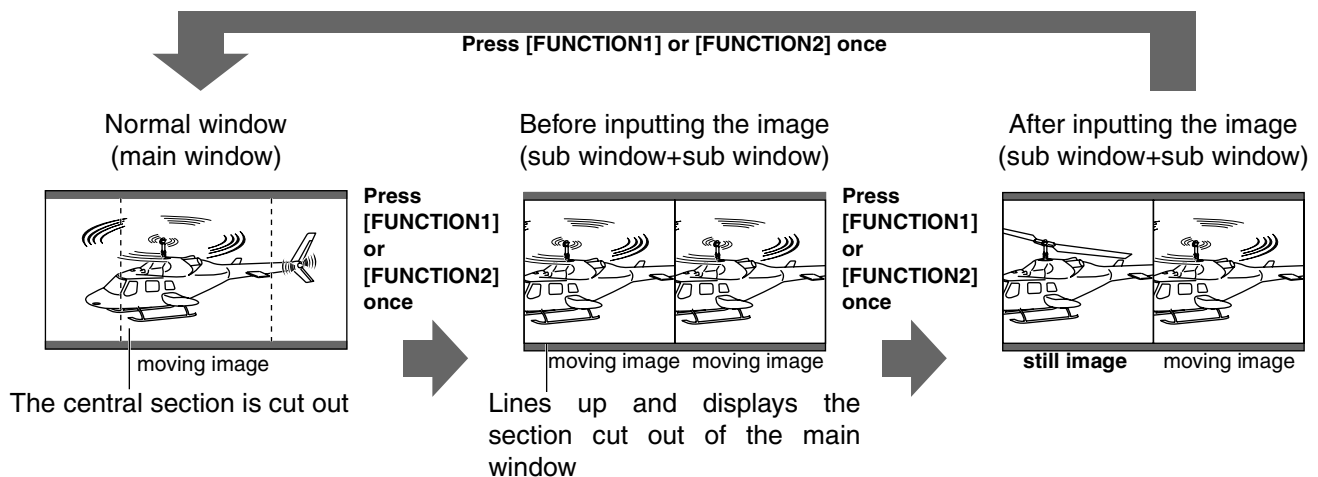

#### • WFM

Displays the Wave Form Monitor image

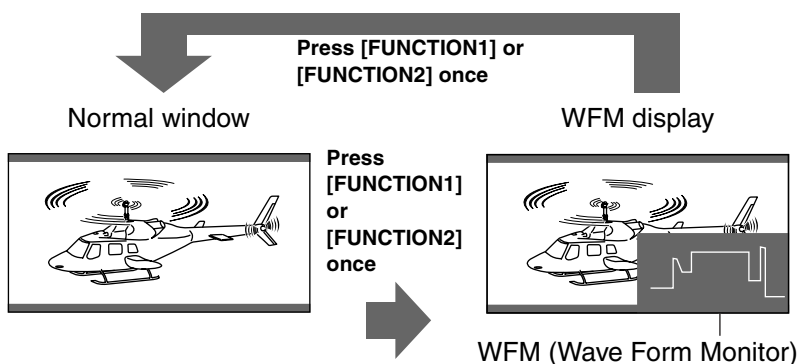

The window is displayed in 16:9 aspect.

#### Precautions when selecting FULL/PART

This function compares screens with the same input terminal and same format. If different input formats, or if signals are input between different input channels, the sub-window (left side, still image) becomes blurred and blanking occurs. However, if the same format signals are input into the input terminal when acquiring the still image, the images will be displayed correctly.

## Main Menu (continued)

### GPI

The “GPI CONTROL” item is used to set enable/disable of all GPI functions, and assigns functions to each of the GPI terminal pins (→ page 24).

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
<b>GPI CONTROL</b>	< <u>DISENABLE</u> > <ENABLE>	GPI functions enable/disable settings
<b>GPI1–GPI8</b>	< <u>UNDEF</u> > <MARKER1 ON/OFF> <MARKER2 ON/OFF> <MARKER BACKHALF> <MARKER BACKBLACK > <CENTER MARKER> <INPUT SEL. VIDEO> <INPUT SEL. Y/C> <INPUT SEL. SDI1> <INPUT SEL. SDI2> <INPUT SEL. YP <sub>B</sub> P <sub>R</sub> /RGB> <SD ASPECT> <SCAN> <R-TALLY> <G-TALLY> <MONO> <GAMMA SELECT> <RGB SYNC>	Used to set the GPI control terminal pin assign. You can set the same items for each terminal (refer to page 24 for details).

#### Note:

Please be aware that the following can not be performed.

- “SD ASPECT” operation when input signal is HD or PC
- “SCAN” operation when the input signal is PC
- “GAMMA SELECT” operation when the input signal is PC
- “RGB SYNC” operation when anything other than “RGB-VIDEO” is selected in “YP<sub>B</sub>P<sub>R</sub>/RGB” in the “INPUT SELECT” menu
- “MONO” operation when input signal is PC

## Main Menu (continued)

## INPUT SELECT

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
VIDEO / Y/C	<u>&lt;AUTO&gt;</u> <NTSC> <PAL>	Used to select the input format for VIDEO and Y/C input. *1 <AUTO> Either NTSC or PAL is automatically selected. <NTSC> NTSC                      <PAL> PAL
NTSC SETUP	<75> <u>&lt;00&gt;</u>	Selects the NTSC setup level. <75> Select this when using with a setup signal of 7.5 IRE. (The inner parts of the monitor are set to the 7.5 IRE setup level to suit the black level) <00> Select this when there is no setup level signal.
YP <sub>B</sub> P <sub>R</sub> /RGB	<u>&lt;YP<sub>B</sub>P<sub>R</sub>&gt;</u> <RGB-VIDEO> <RGB-COMP.>	Selects either YP <sub>B</sub> P <sub>R</sub> (Component) or RGB input mode. <YP <sub>B</sub> P <sub>R</sub> > Selects the YP <sub>B</sub> P <sub>R</sub> signal. <RGB-VIDEO> Selects the video RGB signal. <RGB-COMP.> Selects the PC RGB signal.
COMPONENT LEVEL	<u>&lt;SMPTE&gt;</u> <B75> <B00>	Selects YP <sub>B</sub> P <sub>R</sub> (Component) signal input level. <SMPTE> When the signal level specified in SMPTE is Chroma 100 IRE P <sub>B</sub> , P <sub>R</sub> = 0.7 Vp-p. <B75> Select this when connecting a betacam or similar devices set to 7.5 IRE. (The inner parts of the monitor are set at 7.5 IRE setup level to suit the black level) <B00> Select this when connecting a betacam or similar devices that are not setup to the IRE level.
RGB SYNC	<u>&lt;G-ON&gt;</u> <EXT>	Selects the SYNC when using RGB-VIDEO input. <G-ON> Select when a synchronizing signal is superimposed on the G signal. <EXT> Select when an external synchronizing signal is received in synchronization.
COMP.	▼	Performs analog PC settings. (Refer to "COMP." below)

\*1 "AUTO" is set when the monitor is shipped from the factory, but if there are concerns about noise etc. from outside the input signal, we recommend assigning specific format.

■ **COMP.**

The following menus are switched by selecting “RGB-COMP.” in “YP<sub>B</sub>P<sub>R</sub>/RGB” in the “INPUT SELECT” menu.

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
<b>AUTOSETUP</b> *1		Screen automatic adjustment is performed when “RGB-COMP.” is selected in “YPbPr/RGB” in the “INPUT SELECT” menu. “AUTOSETUP” is performed if a different screen is displayed, and “YES” is selected.
<b>H POSITION</b>	<0–60> (Factory preset settings: 30)	Used to adjust the picture display position in the horizontal direction. *2
<b>V POSITION</b>	<0–60> (Factory preset settings: 30)	Used to adjust the picture display position in the vertical direction. *2
<b>PHASE</b>	<0–31> (Factory preset settings: → page 23)	Used to adjust the clock phase with 1/32 clock phases. *2
<b>CLOCK</b>	<700–1800> (Factory preset settings: → page 23)	Used to adjust the sampling clock in dot units. *2
<b>WXGA/XGA</b>	<XGA> <WXGA>	Switches between WXGA and XGA.

\*1 "EXECUTING" is displayed while "AUTOSSETUP" is being executed, and "COMPLETE" is displayed when "AUTOSSETUP" is completed.

If "AUTOSSETUP" cannot be completed, "INCOMPLETE" is displayed.

\*2 Each "RGB-COMP." input compatible format can be adjusted, but you cannot load ("SETUP LOAD" → page 19) or save ("SETUP SAVE" → page 19) the user data

## Main Menu (continued)

### ■ “PHASE” and “CLOCK” factory preset setting values

FORMAT	CLOCK	PHASE	FORMAT	CLOCK	PHASE
640x400(70Hz)	800	18	1024x768(60Hz)	1344	2
640x480(60Hz)	800	17	1024x768(70Hz)	1328	22
640x480(75Hz)	840	10	1024x768(75Hz)	1312	16
640x480(85Hz)	832	5	1024x768(85Hz)	1376	17
800x600(60Hz)	1056	31	1280x768(60Hz)	1728	8
800x600(75Hz)	1056	12	1280x768(75Hz)	1712	31
800x600(85Hz)	1048	29	1280x1024(60Hz)	1688	20

### AUDIO

Adjusting the speaker output. This can only be set when the monitor is equipped with an embedded audio unit BT-YAE1700G (optional). If the monitor is not equipped with an embedded audio unit, the output will be in analog.

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
<b>INPUT SELECT</b>	<u>&lt;AUTO&gt;</u> <ANALOG> <EMBEDDED>	Used to select speaker output. <AUTO> When SDI input line is selected (front panel) : embedded audio (SDI terminal) When any other line than SDI input line is selected (front panel) : analog (AUDIO input terminal) <ANALOG> Analog (AUDIO input terminal) <EMBEDDED> When SDI input line is selected (front panel) : embedded audio (SDI terminal) When any other line than SDI input line is selected (front panel) : No sound
<b>EMBEDDED SELECT L</b>	<CH1-CH8> (Factory preset settings: CH1)	Used to select the audio channel of the embedded audio outputted to the left speaker.
<b>EMBEDDED SELECT R</b>	<CH1-CH8> (Factory preset settings: CH2)	Used to select the audio channel of the embedded audio outputted to the right speaker.

### CONTROL

The underlined values are factory preset setting values.

Sub menu	Settings	Explanation
<b>CONTROL</b>	<u>&lt;LOCAL&gt;</u> <REMOTE>	Used to select the operation. (Combined control lock) <LOCAL> Front operation enabled <REMOTE> Remote operation enabled (The front controls become locked)*1
<b>LOCAL ENA*2</b>	<u>&lt;DIS.&gt;</u> <INPUT>	When “REMOTE” is selected in “CONTROL”, this selects whether front controls are enabled/disabled. <DIS.> All front operations are disabled. <INPUT> All controls except for the [INPUT SELECT] button and volume knob are disabled.

\*1 The menu can be displayed when the lock is engaged.

The only menu setting that can be changed when the lock is engaged is the “CONTROL/LOCAL ENA” item.

When the lock is engaged, the picture adjusting knob is disabled.

Operations when the lock is engaged follow the settings in “LOCAL ENA”.

When the lock is engaged, the volume knob can be operated (→ page 8, **6**).

When the lock is engaged, the key mark is displayed on the screen.



\*2 This is only enabled when “CONTROL” is set to “REMOTE”.



# REMOTE Specifications

 
REMOTE operation is possible on this monitor using the GPI/RS-232C terminal.

## GPI terminal

Each of the items in the GPI screen are compatible with the following terminals.

You can assign functions to each terminal in the menu GPI screen (→ page 21).

The functions assigned to each terminal operate when the GND (5 Pin) is connected (ON) or open (OFF).

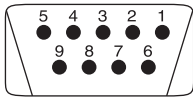

GPI Terminal (9P)

Pin number	Signal
1	GPI1
2	GPI2
3	GPI3
4	GPI4
5	GND
6	GPI5
7	GPI6
8	GPI7
9	GPI8

### ■ Operating conditions

Level operation: operates when GND is connected.

Edge operation: operates when GND changes from open to connected.

\* If you have assigned a level operation function to more than one terminal, the function operates as long as one of the terminals is connected.

Assignment items	Function	Operating conditions
<b>UNDEF</b>	No settings (no terminal assignment functions)	—
<b>MARKER1 ON/OFF</b>	Switches the marker display of the marker decided in "GPI PRESET1" (→ page 15) in the "MARKER" menu.	Level operation (Connected: ON, Open: OFF)
<b>MARKER2 ON/OFF</b>	Switches the marker display of the marker decided in "GPI PRESET2" (→ page 15) in the "MARKER" menu.	Level operation (Connected: ON, Open: OFF)
<b>MARKER BACKHALF</b>	Reduces the brightness of the background outside the marker displayed in "GPI PRESET1" (→ page 15) by 50%.	Level operation (Connected: ON, Open: OFF)
<b>MARKER BACKBLACK</b>	Reduces the brightness of the background outside the marker displayed in "GPI PRESET1" (→ page 15) to 0%.	Level operation (Connected: ON, Open: OFF)
<b>CENTER MARKER</b>	Switches the center marker display ON/OFF. (When other markers are being displayed, this is superimposed on the other markers)	Level operation (Connected: ON, Open: OFF)
<b>INPUT SEL. VIDEO</b>	Switches the input system to VIDEO.	Edge operation
<b>INPUT SEL. Y/C</b>	Switches the input system to Y/C.	Edge operation
<b>INPUT SEL. SDI1</b>	Switches the input system to SDI1.	Edge operation
<b>INPUT SEL. SDI2</b>	Switches the input system to SDI2.	Edge operation
<b>INPUT SEL. YP<sub>B</sub>Pr/RGB</b>	Switches the input system to YP <sub>B</sub> Pr/RGB.	Edge operation
<b>SD ASPECT</b>	Sets the aspect ratio settings when using SD signal input. (Disabled when using HD signal and PC signal)	Level operation (Connected: 16:9, Open: 4:3)
<b>SCAN</b>	You can switch the scan mode between "UNDER" and "NORMAL". (Disabled when using PC signal)	Level operation (Connected: UNDER, Open: NORMAL)
<b>R-TALLY<sup>*1</sup></b>	Lights the red tally.	Level operation (Connected: ON, Open: OFF)
<b>G-TALLY<sup>*1</sup></b>	Lights the green tally.	Level operation (Connected: ON, Open: OFF)
<b>MONO</b>	Switches between color and monochrome (MONO). (Disabled when using PC signal)	Level operation (Connected: Monochrome, Open: Color)
<b>GAMMA SELECT</b>	Used to select the gamma curve. (Disabled when using PC signal)	Level operation (Connected: FILM mode, Open: NORMAL mode)
<b>RGB SYNC<sup>*2</sup></b>	Selects the SYNC when using RGB-VIDEO input.	Level operation (Connected: EXT, Open: G-ON)

\*1 When both "R-TALLY" and "G-TALLY" are ON at the same time, the tally color becomes orange.

\*2 This is only enabled when "RGB-VIDEO" is selected in "YP<sub>B</sub>Pr/RGB" in the "INPUT SELECT" menu.




## REMOTE Specifications (continued)

### ■ Assignment of item priority levels

- When both "MARKER1" and "MARKER2" are ON at the same time, "MARKER1" has priority.
- When both "MARKER BACKHALF" and "MARKER BACKBLACK" are ON at the same time, "MARKER BACKBLACK" has priority.
- When more than 2 of "INPUT SEL. VIDEO", "INPUT SEL. Y/C", "INPUT SEL. SDI1", "INPUT SEL. SDI2", "INPUT SEL. YPbPr/RGB" are ON at the same time, the one that was switched ON last has priority.

### RS-232C terminal

Refer to the following diagram and lower right table for the RS-232C terminal pin arrangement and connections. Please contact the vendor for information about detailed systems which used the RS-232C.

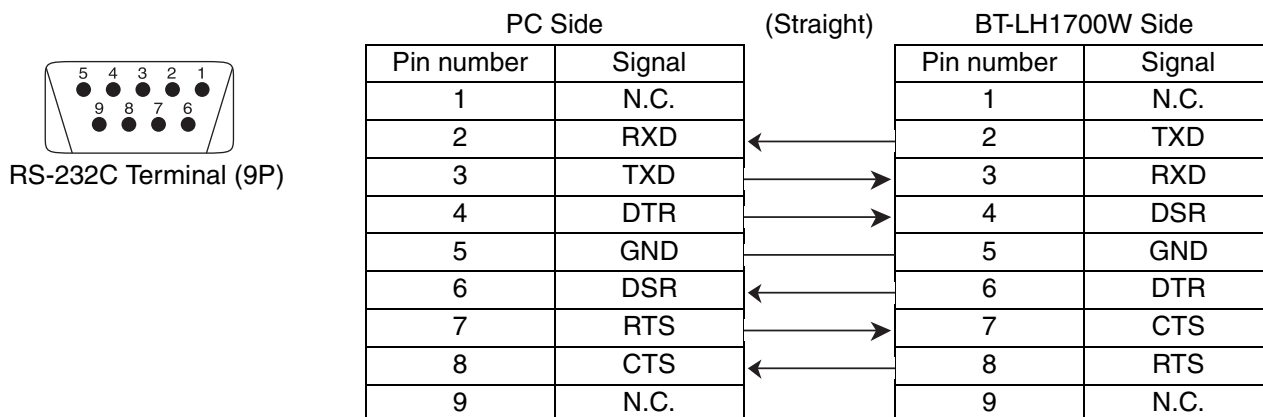

### RS-232C REMOTE operation method

#### ■ Connectors and signal names

**Connector: D-SUB 9-pin (female)**

**Signal name**

Pin number	Signal name	Explanation
1	N.C.	Not connected
2	TXD	Transmission data
3	RXD	Reception data
4	DSR	Connected inside.
5	GND	Ground
6	DTR	Connected inside.
7	CTS	Connected inside.
8	RTS	Connected inside.
9	N.C.	Not connected

#### ■ Communication Conditions

Signal level	Conforms to RS-232C
Synchro system	Tone pace synchro system
Transfer rate	9600 bps
Parity	None
Data length	8 bit
Stop bit	1 bit
Flow control	None

#### ■ Command format

STX (02h)	Command	:	Data	ETX (03h)
-----------	---------	---	------	-----------

- Commands are 3 characters following STX, finally adding ETX.
- Add a : (colon) after the command as required, and add the data.

#### ■ Response formats

1. Setting command response

STX (02h)	Command	ETX (03h)
-----------	---------	-----------

2. Query command response

STX (02h)	Data	ETX (03h)
-----------	------	-----------

3. Error response

STX (02h)	Error code	ETX (03h)
-----------	------------	-----------

Error code

ER001: Invalid command

ER002: Parameter error

## REMOTE Specifications (continued)

### ■ Setting command

No	Command	Explanation	Data	Response
1	IIS	Input switch	0: SDI1 3: YP <sub>B</sub> P <sub>R</sub> /RGB 1: SDI2 4: Y/C 2: VIDEO	IIS
2	VPC	Image quality adjustment	CON00-60 : Contrast settings BRI00-60 : Brightness settings CRO00-60 : Chroma settings PHA00-60 : Phase settings	VPC
3	OBO	Blue only	0: OFF 1: ON	OBO
4	OHV	HV Delay	0: OFF 3: HV DELAY 1: H DELAY 2: V DELAY	OHV
5	DSD	Status display	0: CONTINUE 1: 3SEC OFF 2: OFF	DSD
6	ISM	Analog mode	ANA0: YP <sub>B</sub> P <sub>R</sub> ANA2: RGB-COMP. ANA1: RGB-VIDEO	ISM
7	IRF	RGB Sync	0: G-ON 1: EXT	IRF
8	DMK	Marker settings	16:9 marker MK100: OFF MK102: 88% MK104: 95% MK106: 13:9 MK108: 90% MK110: VISTA 4:3 marker MK200: OFF MK202: 88% MK204: 95% Marker background BAK0: NORMAL Center marker CMK0: OFF MK101: 80% MK103: 93% MK105: 14:9 MK107: 4:3 MK109: CNSCO MK201: 80% MK203: 93% MK208: 90% BAK1: HALF BAK2: BLACK CMK1: ON	DMK
9	MGM	Gamma selection	1: NORMAL 2: FILM	MGM
10	MCT	Color temperature settings	00: D56 03: VAR1 10-73: USER0-63 01: D65 04: VAR2 02: D93 05: VAR3	MCT
11	VPC	Sharpness settings	SHP0: LOW SHH00-30 Horizontal sharpness settings SHV00-30 Vertical sharpness settings SHP1: HIGH	VPC
12	MIP	IP mode settings	0: MODE1 1: MODE2	MIP
13	OMO	Monochrome settings	1: OFF 2: ON	OMO
14	MAS	SD aspect settings	0: 16:9 1: 4:3	MAS
15	MSC	Scan settings	0: NORMAL 1: UNDER	MSC
16	MCO	Remote settings	0: LOCAL 1: REMOTE	MCO
17	MLE	Remote operation settings	0: DISENABLE 1: INPUT	MLE

## REMOTE Specifications (continued)


### ■ Query command

No	Command	Explanation	Data	Response
1	QIS	Input selection		0: SDI1      1: SDI2      2: YP <sub>B</sub> P <sub>R</sub> 3: RGB-VIDEO   4: VIDEO      5: Y/C 6: RGB-COMP.
2	QPC	Image quality adjustment	CON : Contrast setting value	00-60
			BRI : Brightness setting value	00-60
			CRO : Chroma setting value	00-60
			PHA : Phase setting value	00-60
3	QBO	Blue only		0: OFF      1: ON
4	QMK	Marker	MAK : Area marker	00: OFF      01: 80%      02: 88% 03: 93%      04: 95%      05: 14:9 06: 13:9      07: 4:3      08: 90% 09: CNSCO    10: VISTA
			BAK : Background	0: NORMAL   1: HALF      2: BLACK
			CMK : Center marker	0: OFF      1: ON
5	QGM	Gamma		1: NORMAL      2: FILM
6	QCT	Color temperature		00: D56      01: D65      02: D93 03: VAR1      04: VAR2      05: VAR3 10-73: USER0-63
7	QPC	Sharpness	SHP : Sharpness mode	0: LOW      1: HIGH
			SHH : Horizontal sharpness value	00-30
			SHV : Vertical sharpness value	00-30
8	QIP	IP mode		0: MODE1      1: MODE2
9	QMO	Monochrome		1: OFF      2: ON
10	QAS	Aspect		0: 16:9      1: 4:3
11	QSC	Scan		0: NORMAL      1: UNDER
12	QAN	Analog mode		0: YP <sub>B</sub> P <sub>R</sub> 1: RGB-VIDEO 2: RGB-COMP.
13	QSY	RGB sync		0: G-ON      1: EXT
14	QFR	Format		01: 1080/60I      02: 1080/59I 03: 1080/50I      04: 1080/30P 05: 1080/29P      06: 1080/25P 07: 1080/24P      08: 1080/23P 09: 1080/24PsF    10: 1080/23PsF 13: 720/60P      14: 720/59P 15: 576/50I      16: 480/60P 17: 480/60I      18: 576/50P 20: 1080/60P      21: 1080/59P 22: 1080/50P      23: 720/50P 50: 640 x 400 (70Hz) 51: 640 x 480 (60Hz) 52: 640 x 480 (75Hz) 53: 640 x 480 (85Hz) 54: 800 x 600 (60Hz) 55: 800 x 600 (75Hz) 56: 800 x 600 (85Hz) 57: 1024 x 768 (60Hz) 58: 1024 x 768 (70Hz) 59: 1024 x 768 (75Hz) 60: 1024 x 768 (85Hz) 61: 1280 x 768 (60Hz) 62: 1280 x 768 (75Hz) 63: 1280 x 1024 (60Hz)


# How to Attach the Rack mounting

If you use rack-mounting adaptors BT-MA1710G (optional) with this monitor, you can incorporate a 19-inch standard rack (the height is 7U size). Please see the instructions below for attachment.

1. Remove the screws on the back and base of the monitor (3 places), and remove the stand.

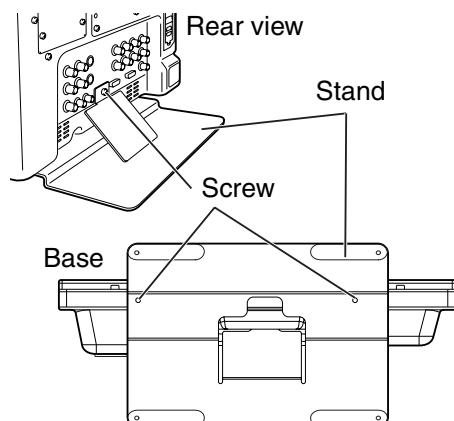

2. Using the screws provided, attach the rack-mounting adaptors to both sides of the monitor.

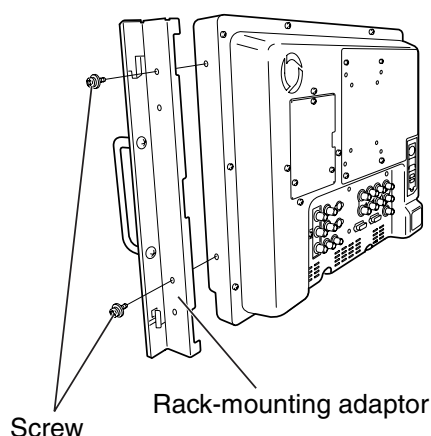

## Error/Warning Displays

If for any reason an error occurs in this monitor, the LEDs above the picture adjusting knob **flash at 1-second intervals** (informing you of the error/warning display).

Error/Warning displays	Symptom	Solution
<b>Inverter error</b>	If a malfunction occurs in the inverter that controls the backlight brightness, the backlight will switch OFF. The screen becomes completely black.	Switch the power supply OFF once, then switch it back ON again. If an error is still displayed, contact the vendor where you purchased the monitor.
<b>Fan stop Error</b>	The fan in the back of the monitor stops if a malfunction occurs. If a picture is being displayed when the malfunction occurs, it will continue being displayed as is.	If the error is still displayed after this, contact the vendor where you purchased the monitor immediately. If a fan stop error occurs, setting "FAN MOTOR" to "OFF" in the "SYSTEM CONFIG" menu (refer to page 19) allows you to continue using the monitor with reduced screen brightness.
<b>Low incoming voltage from external DC power source warning/ LOW VOLTAGE</b>	The "LOW VOLTAGE" status flashes in blue on the screen. This signals that the incoming voltage from the external DC power source has fallen below approximately 11.3 V.	<ul style="list-style-type: none"><li>• If a battery is being used as the external DC power source, replace the battery with one that is fully charged.</li><li>• If the power turns OFF, connect the product with an external DC power source with a voltage of 11.0 V or higher, and after first switching the POWER switch to OFF, switch it back to ON again.</li></ul>
	The "LOW VOLTAGE" status is displayed in red on the screen, and after approximately 4 seconds the power turns OFF. This signals that the incoming voltage from the external DC power source has fallen below 11.0 V.	

## Maintenance

- To clean the cabinet or surface of the liquid crystal protection panel, gently wipe with a soft, dry cloth.  
If the surfaces are extremely dirty, use a soft cloth dipped in a weak detergent solution and then wrung-out to clean the surfaces, then use a dry cloth to finish. Water or similar substances getting inside the monitor can cause a malfunction.
- Never use thinner or benzene to clean this unit.  
Doing so would cause the surface of the monitor to become discolored, and cause paint to peel.
- Do not spray cleansers directly onto the monitor.  
Water or similar substances getting inside the monitor can cause a malfunction.

# Maintenance Inspections

---

Maintenance inspections are necessary for the user to use this equipment safely. It is important to keep monitor functions in good condition at all times through periodical and appropriate maintenance. In order to use this monitor for a long time, and to make full use of all of its functions, be sure to carry out the following maintenance inspections.

## 1. Necessity of periodical maintenance services

A backlight is used in the liquid crystal panel. This part (consumable) deteriorates as time passes, and can cause performance levels to drop, or may cause a malfunction.

Therefore, in addition to the after-service repairs performed if a malfunction occurs, it is essential that general servicing and maintenance servicing are conducted on a regular basis, to prevent malfunctions and accidents caused by the deterioration of consumable parts, and to keep the monitor working normally.

## 2. Standard maintenance time guidelines and items to be performed

The following maintenance performance times give standard guidelines for when to perform maintenance, and do not indicate the individual lifespan of your equipment. Also, note that the deterioration time varies depending on the usage environment and way in which the equipment is used.

Part name	Quantity	Periodic maintenance inspection time
Backlight and liquid crystal panel	1	Replace every 50,000 hours*
Fan	1	Replace every 10,000 hours

\* You cannot replace just the backlight unit on its own.

# Specifications

## ■ General

### Input power

	Power supply:	Power consumption:
AC:	100 V - 240 V, 50/60 Hz	0.6 A – 0.3 A
DC:	12 V (11 V – 17 V)	4.0 A

 is the safety information.

### Dimensions:

- Including stand  
430 (W) mm x 323.5 (H) mm x 198 (D) mm  
[16.9 (W) inches x 12.7 (H) inches x 7.8 (D) inches]
- Main body only, not including stand  
430 (W) mm x 309 (H) mm x 81.1 (D) mm  
[16.9 (W) inches x 12.2 (H) inches x 3.2 (D) inches]

### Weight:

- Including stand  
7.1 kg (15.7 lb)
- Main body only, not including stand  
6.2 kg (13.7 lb)

### Operating temperature:

+5 °C to +35 °C (+41 °F to +95 °F)

### Operating humidity:

20 % to 80 % (no condensation)

### Storage temperature:

-20 °C to +60 °C (-4 °F to +140 °F)

## ■ Panel

Size: 17.0 type  
Aspect ratio: 15:9  
Number of pixels: 1280 x 768 (WXGA)  
Display colors: Approx. 16,700,000 colors  
View angle: 170° up/down, 170° right/left

## ■ Input Connectors

### Image signal input:

#### VIDEO:

1 line, BNC x 2  
(1 connector with through-out configuration)

#### Analog component:

1 line for YP<sub>B</sub>P<sub>R</sub>/RGBS, BNC x 8  
(4 connectors with through-out configuration)  
However, when input is RGB-COMP. this becomes  
BNC x 5 (R, G, B, HD, and VD).  
(Through-out is not available)

#### SDI:

2 lines, BNC x 3  
(1 connector with switched-out configuration)

#### DVI-D (HDCP compatible):

1 line, DVI-D x 1

Audio input: Pin jack x 2 (stereo)

GPI: D-SUB, 9 pins x 1

RS-232C: D-SUB, 9 pins x 1

DC input: XLR, 4 pins x 1

## ■ Signal level

### VIDEO

EXT SYNC signal level: 0.3 Vp-p to 4.0 Vp-p

HD/VD signal level: TTL level

### AUDIO

AUDIO input level: 0.5 Vrms

Speaker output: 0.5 W + 0.5 W

Headphone output: Stereo mini jack M3  
32 Ω, level adjustable

## ■ SDI embedded audio

HD-SDI: SMPTE299M compatible

Sampling rate: 48 kHz, synchronous/asynchronous  
8 ch

SD-SDI: SMPTE272M compatible

Sampling rate: 48 kHz, synchronous  
4 ch

## Specifications (continued)

### ■ List of compatible signal formats (○: Compatible, △: Limited compatibility)

Input signal formats	VIDEO	SDI1	SDI2	YPbPr	RGB-VIDEO	RGB-COMP.	DVI VIDEO	DVI COMP.
NTSC	○							
PAL	○							
480/59.94I		○	○	○	○			
480/59.94P				○	○		○	
576/50I		○	○	○	○			
576/50P				○	○		○	
720/50P		○	○	○			○	
720/59.94P		○	○	○	○		○	
720/60P		○	○	○	○		○	
1035/59.94I		△ <sup>*1</sup>	△ <sup>*1</sup>	△ <sup>*1</sup>	△ <sup>*1</sup>			
1035/60I		△ <sup>*2</sup>	△ <sup>*2</sup>	△ <sup>*2</sup>	△ <sup>*2</sup>			
1080/23.98PsF		○	○	○				
1080/24PsF		○	○	○				
1080/23.98P		○	○	○				
1080/24P		○	○	○				
1080/25P		○	○	○				
1080/29.97P		○	○	○				
1080/30P		○	○	○				
1080/50I		○	○	○	○		○	
1080/50P				○			○	
1080/59.94I		○	○	○	○		○	
1080/60I		○	○	○	○		○	
1080/59.94P				○			○	
1080/60P				○			○	
640 x 400 (70 Hz)						○		
640 x 480 (60 Hz)						○		○
640 x 480 (75 Hz)						○		
640 x 480 (85 Hz)						○		
800 x 600 (60 Hz)						○		○
800 x 600 (70 Hz)						○		
800 x 600 (75 Hz)						○		
800 x 600 (85 Hz)						○		
1024 x 768 (60 Hz)						○		○
1024 x 768 (70 Hz)						○		
1024 x 768 (75 Hz)						○		
1024 x 768 (85 Hz)						○		
1280 x 768 (50 Hz)						○		○
1280 x 768 (60 Hz)						○		○
1280 x 768 (75 Hz)						○		
1280 x 1024 (60 Hz)						○		○

\*1 When 1035/59.94I signal is input, displayed as 1080/59.94I. Other various marker displays will use the 1080/59.94I marker.

\*2 When 1035/60I signal is input, displayed as 1080/60I. Other various marker displays will use the 1080/60I marker.

Weight and dimensions when shown are approximately.  
Specifications are subject to change without notice.

## Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

### Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

# Panasonic®

## Panasonic Broadcast & Television Systems Company Unit Company of Panasonic Corporation of North America

### Executive Office:

One Panasonic Way 4E-7, Secaucus, NJ 07094 (201) 348-7000

### EASTERN ZONE:

One Panasonic Way 4E-7, Secaucus, NJ 07094 (201) 348-7196

**Southeast Region:** (201) 348-7162

### WESTERN ZONE:

3330 Cahuenga Blvd W., Los Angeles, CA 90068 (323) 436-3500

### Government Marketing Department:

One Panasonic Way 2E-10, Secaucus, NJ 07094 (201) 348-7587

### Broadcast PARTS INFORMATION & ORDERING:

9:00 a.m. – 5:00 p.m. (EST) (800) 334-4881/24 Hr. Fax (800) 334-4880

Emergency after hour parts orders (800) 334-4881

### TECHNICAL SUPPORT:

Emergency 24 Hour Service (800) 222-0741

## Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3 (905) 624-5010

## Panasonic de Mexico S.A. de C.V.

Av angel Urraza Num. 1209 Col. de Valle 03100 Mexico, D.F. (52) 1 951 2127

## Panasonic Puerto Rico Inc.

San Gabriel Industrial Park, 65th Infantry Ave., Km. 9.5, Carolina, Puerto Rico 00630 (787) 750-4300

## Professional & Broadcast IT Systems Business Unit Europe

## Panasonic AVC Systems Europe a Division of Panasonic Marketing Europe GmbH

Hagenauer Str. 43, 65203 Wiesbaden-Biebrich Deutschland Tel: 49-611-235-481