 




EF-E II MOUNT ADAPTER

Auto focus Increasing aperture

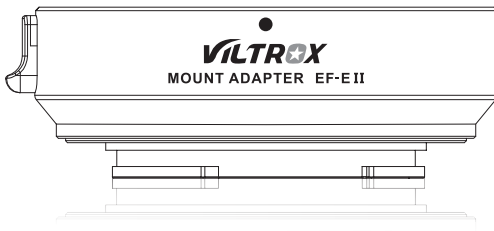

Thank you for using Viltrox mount adapter !

*Before setting the Viltrox mount adapter on your camera, please read this instruction so that all the functions of the mount adapter will be implemented.



Product function

Viltrox EF-E II mount adapter is designed to allow Canon EF series Lenses to be used on Sony E Mount APS-C cameras. multiply 0.71 based on the original focal length (equivalent focal length=focal lengthx 0.71), which helps increase 3 stops aperture.

Build-in 4 groups,4pcs optical glasses. By adapter mounting it can achieve functions of EXIF signal transmission, AF(auto focus) and PDAF & CDAF focus mode switching. Firmware upgrade can be operated via the USB port.

Switching between Focus Mode (PDAF and CDAF):

1. Select desired focus mode on adapter.
2. Turn off camera.
3. Take out camera battery or re-attach adapter with lens again.
4. Turn on camera and focus mode changed.

Attentions

1. After mounting the adapter on the lens and setting the MF mode to AF mode, if autofocus still doesn't work, please restart the camera.
2. The lens performance won't be affected with the adapter mounted.
3. Please use the switch on the lens to set the lens function.

If the settings in camera menu differ from those on the lens, settings on the lens shall prevail.

4. When the lens you use is much heavier than the camera, be sure to hold the lens when moving the camera or shooting.
Since the minimum focusing distance will increase with the adapter mounted, the maximum magnification and field of view may change.



Name of each part

EF Lens mount index

Optical lens group

 
 
Lens release lever

Contacts (Lens side)

Tripod mount knob

Tripod mount screw

Tripod socket

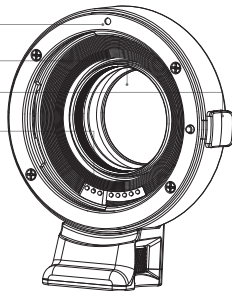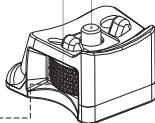


USB upgrade port

Camera mount index


Focus mode switch (CDAF & PDAF)

 Contacts (Camera side)







Regulatory logo

 Tripod mount socket

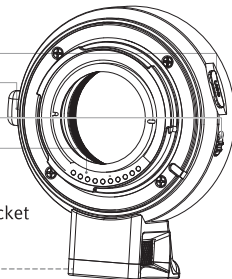



Mounting and Detaching the Adapter

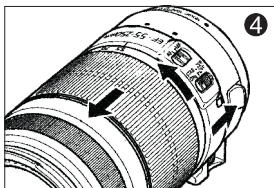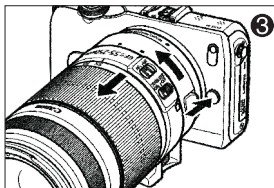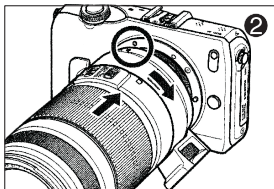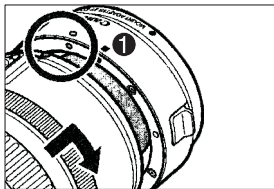    

◎ Mounting procedures

1. Attach the EF lens to the EF mount side of the adapter.

Insert the lens into the adapter by aligning the mount index found on the EF lens (red circle) with the same mark found on the adapter, and turn the EF lens clockwise until you hear a click. (fig. ❶)

2. Mount the adapter to the camera.

Insert the adapter into the camera by aligning the Sony E-mount lens mount index found on the adapter (white circle) with the same mark found on the camera, and turn the adapter counter clockwise until you hear a click. (fig. ❷)

◎ Detaching procedures

1. Turn the camera OFF, and detach the adapter from the camera while the EF lens is still attached to it.

Turn the adapter counter clockwise while pressing the camera's lens release button. (fig. ③) Detach the adapter once it has stopped turning.

2. Detach the EF lens from the adapter.

Turn the EF lens counter clockwise while pushing the lens release lever on the adapter (fig. ④). Detach the EF lens once it has stopped turning.



Attaching the tripod mount

1. Attach the included tripod mount to the adapter by firmly turning the tripod mount knob.

Please make sure that the tripod mount is facing in the correct direction in relation to the adapter.

2. Attach the tripod using the tripod mount socket. Securely attach the tripod while firmly holding the adapter.

3. Precautions when using this adapter with a tripod.

When shooting with a tripod, do not use the camera's tripod mount socket while the adapter is attached. Be sure to use the tripod mount included with the adapter.



When using a tripod with EF lenses that are equipped with a tripod mount, such as super telephoto lenses, please be sure to use it to mount the lens to the tripod.

Attention: Do not attach camera or lens when update adapter firmware.

Update procedure:

1. Connect adapter to computer with USB cable.
2. A new drive "Adapter EF" will appear in your computer.
3. Download latest firmware from www.viltrox.com.
4. Unzip and copy the *.vtx file to "Adapter EF".
5. Disconnect the adapter from computer and firmware update complete.



Specifications

Compatible lenses	Canon EF series lenses
Compatible cameras	Sony E-mount (APS-C) series cameras
Focus mode	Auto focus
Focal Lenth Multiplier	0.71x
Optical glasses	4 groups, 4 glasses
Tripod Socket	Cu1/4"× 1
Firmware upgrade	USB upgrade port
Diameter and Length	68 mm × 28 mm
Weight	Approx. 174 g
Front cap	Camera cover
Rear cap	Lens Dust cap

Shenzhen Jueying Technology Co.,Ltd. **www.viltrox.com**
2/F,Blk 4, Baokun Science and Technology Industrial Park, Xialingpai,
Dalang Str.,Longhua,Shenzhen,China