


# E-MOUNT TO PL MOUNT PRO (A6300)

Included:


(1) 1/4x20x1/4 socket cap

(6) lens adapter rods:

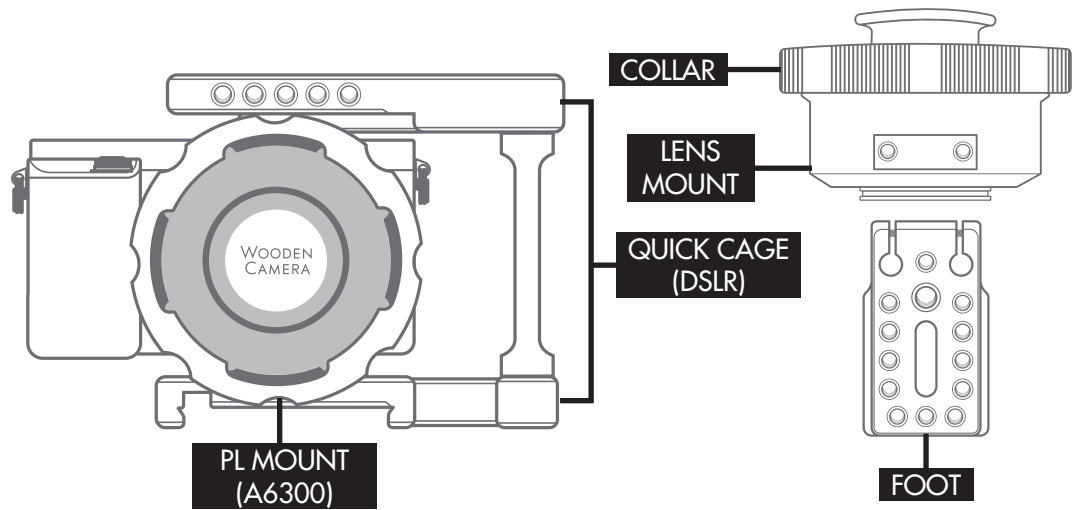

## INSTALLATION

1. Select **CAMERA** and **PL MOUNT**, locate **WHITE MARK** on **LENS MOUNT** and **E-MOUNT**.
2. Aligning both **WHITE MARKS**, fit **LENS MOUNT** to **E-MOUNT** and gently twist clockwise to lock into place.

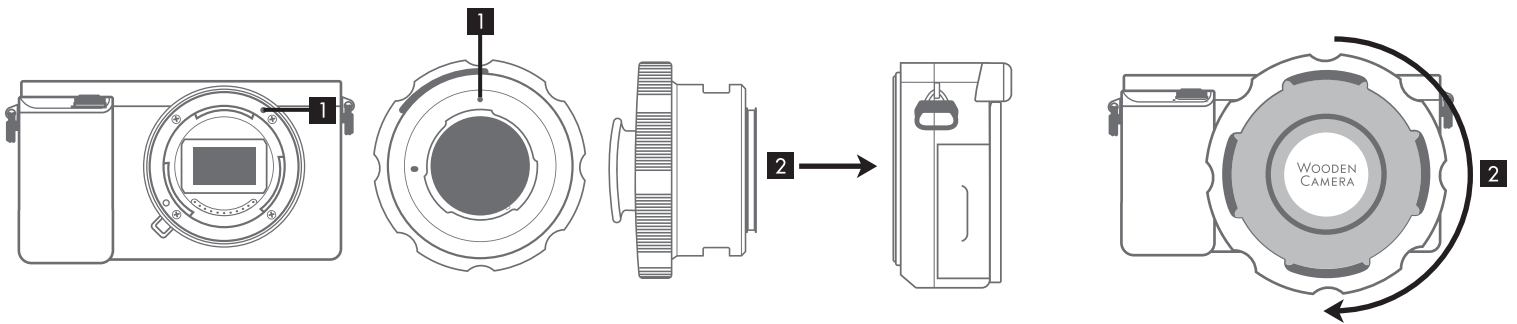

3. Select two appropriate length **ADAPTER RODS**, locate indicated **SCREW HOLES** on **LENS MOUNT** and tighten **RODS** to **LENS MOUNT**.
4. Select **ADAPTER FOOT**, locate & align **ROD HOLES** to **ADAPTER RODS**.
5. Locate **1/4-20 HOLE** on **CAMERA BODY**, select **1/4-20 SOCKET CAP**, drop through **SCREW CHANNEL**, and tighten **FOOT** to **BODY**.
6. Secure **ROD** to **FOOT** by tightening **ADAPTER ROD CLAMP** with allen wrench.

**NOTE:** To begin attachment of **CAMERA** and **PL MOUNT** to **QUICK CAGE**, follow the instructions below. See **QUICK CAGE** instructions for full assembly.

1. Locate **BASE** and insert one **1/4-20** or **3/8-16 SCREW** into **SCREW CHANNEL**.
2. Locate **1/4-20** or **3/8-16 HOLE** on **ADAPTER FOOT**.
3. Aligning **SCREW CHANNEL** and **ADAPTER FOOT**, tighten **SCREWS** to corresponding **HOLE**.

