

HD 700

Truly excite your ears



Instruction manual
Bedienungsanleitung
Notice d'emploi
Instrucciones de uso
Istruzioni per l'uso
Handleiding
Manual de utilização
説明書


Инструкция по эксплуатации
Instrukcja obsługi
Kullanma kılavuzu
使用说明
説明手冊
사용 안내서
Buku Petunjuk

 **SENNHEISER**

1





2

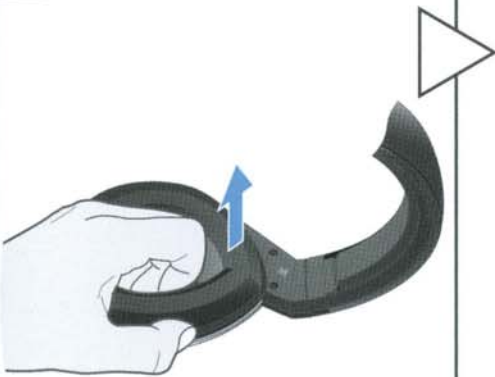

3



4

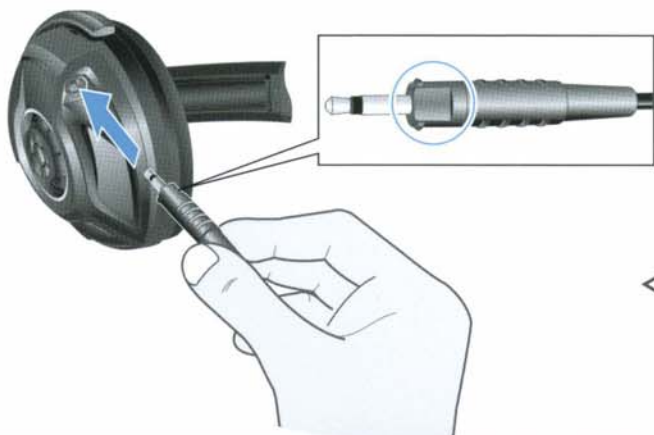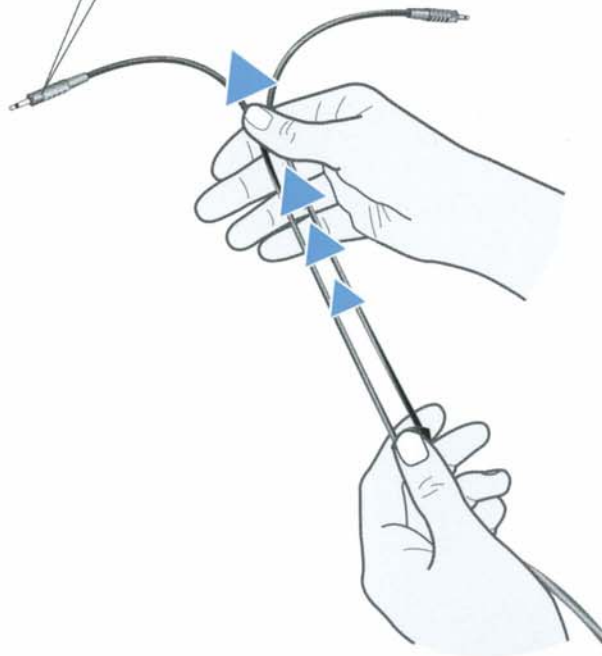

Important safety instructions

- ▶ Read this instruction manual carefully and completely before using the product.
- ▶ Always include this instruction manual when passing the product on to third parties.
- ▶ Do not use an obviously defective product.

Preventing damage to health and accidents

- ▶ Do not listen at high volume levels for long periods of time to prevent hearing damage.
- ▶ Always maintain a distance of at least 3.94" (10 cm) between the ear cups and the cardiac pacemaker or implanted defibrillator since the product generates permanent magnetic fields.
- ▶ Keep the product, accessories and packaging parts out of reach of children and pets who could swallow smaller pieces.

Preventing damage to the product and malfunctions

- ▶ Always keep the product dry and do not expose it to extreme temperatures (hairdryer, heater, extended exposure to sunlight, etc.) to avoid corrosion or deformation.
- ▶ Only clean the product with a soft, dry cloth.
- ▶ Do not store your headphones on a glass dummy head, chair armrest or similar places for long periods as this can widen the headband and reduce the contact pressure of the headphones.
- ▶ Only use attachments/accessories supplied or recommended by Sennheiser.

Delivery includes



Box



HD 700 headphones



Instruction manual

Using the HD 700

1. Connecting the HD 700 and putting it on

- ▶ Take your HD 700 out of the box.
- ▶ Connect the headphones to a 1/4" (6.3 mm) jack socket or use a standard adapter to connect them to a 3.5 mm jack socket.
- ▶ Put your HD 700 on and observe the L (left) and R (right) markings on the ear cup yokes.
- ▶ Pull the ear cups down to fully cover your ears.
- ▶ After listening, put your HD 700 back into the box. In the first days, let the cable hang down. You can then store the wound cable.

2. Replacing the ear pads

- ▶ Grasp the edge of the ear pad and pull it away from the ear cup.
- ▶ Attach the new ear pad to the ear cup by pressing around the entire ear pad.

3. Washing/changing the dust protectors made from 3D mesh

- ▶ Remove the dust protectors from the ear cups.
- ▶ Wash the dust protectors under running, hand-hot water and let them air dry.
- ▶ Replace the dust protectors into the ear cups and carefully press the edges under the ear pads.

4. Connecting/changing the cable

- ▶ By holding on to the plug sleeves, pull the two 2.5 mm jack plugs out of the headphones.
- ▶ Place the cable onto a flat surface and smooth down the narrow "Y" ends. Observe the L (left) and R (right) markings on the cable and on the ear cup yokes.
- ▶ Insert the two 2.5 mm jack plugs into the corresponding sockets. The recess on the upper side of the plug sleeve must be turned inwards to connect with the headphones.

Specifications

Transducer principle	dynamic, open circum-aural
Ear coupling	10 – 42,000 Hz
Frequency response	150 Ω
Impedance	105 dB SPL (1 kHz, 1 V _{rms})
Sound pressure level	< 0.03% (1 kHz, 1 V _{rms})
THD	6.3 mm, straight
Jack plug	–10°C to +55°C
Ambient temperature	approx. 354 g
Weight with cable	approx. 273 g
Weight without cable	3 m
Cable length	

Manufacturer Declarations | Herstellererklärungen | Déclarations du fabricant | Declaraciones del fabricante | Dichiarazioni del costruttore | Verklaringen van de fabrikant

EN Warranty

Sennheiser electronic GmbH & Co. KG gives a warranty of 24 months on this product. For the current warranty conditions, please visit our website at www.sennheiser.com or contact your Sennheiser partner.

In compliance with the following requirements:

• RoHS Directive (2002/95/EC)



• WEEE Directive (2002/96/EC)

Please dispose of this product by taking it to your local collection point or recycling center for such equipment.

CE CE Declaration of Conformity

• EMC Directive (2004/108/EC)

The CE Declaration of Conformity is available at www.sennheiser.com.

DE Garantie

Sennheiser electronic GmbH & Co. KG übernimmt für dieses Produkt eine Garantie von 24 Monaten. Die aktuell geltenden Garantiebedingungen können Sie über das Internet www.sennheiser.com oder Ihren Sennheiser-Partner beziehen. In Übereinstimmung mit den folgenden Anforderungen:

• RoHS-Richtlinie (2002/95/EG)



• WEEE-Richtlinie (2002/96/EG)

Entsorgen Sie das Produkt bei Ihrer örtlichen kommunalen Sammelstelle oder im Recycling Center.

CE CE-Konformität

• EMV-Richtlinie (2004/108/EG)

Die CE Konformitätserklärung steht Ihnen im Internet unter www.sennheiser.com zur Verfügung.

FR Garantie

Sennheiser electronic GmbH & Co. KG offre une garantie de 24 mois sur ce produit. Pour avoir les conditions de garantie actuelles, veuillez visiter notre site web sur www.sennheiser.com ou contactez votre partenaire Sennheiser.

En conformité avec les exigences suivantes :

• Directive RoHS (2002/95/CE)



• Directive WEEE (2002/96/CE)

Veuillez rapporter ce produit à la déchetterie communale ou à un centre de recyclage.

CE Déclaration de conformité pour la CE

• Directive CEM (2004/108/CE)

Vous trouverez la déclaration de conformité sur www.sennheiser.com.

ES Garantía

Sennheiser electronic GmbH & Co. KG concede una garantía de 24 meses sobre este producto. Puede consultar las condiciones de garantía actuales en la página de Internet www.sennheiser.com u obtenerlas de su distribuidor Sennheiser. Conformidad con las siguientes directivas:

• Directiva RoHS (2002/95/CE)



• Directiva WEEE (2002/96/CE)

Le rogamos que deseche el producto a través del centro de recogida y/o reciclaje de su municipio.

CE Conformidad CE

• Directiva CEM (2004/108/CE)

La declaración de conformidad de la CE se puede consultar en Internet: www.sennheiser.com.

IT Garanzia

Per questo prodotto Sennheiser electronic GmbH & Co. KG offre una garanzia di 24 mesi. Le condizioni di garanzia attualmente valide possono essere consultate sul sito Internet www.sennheiser.com oppure presso un centro servizi Sennheiser.

In conformità ai seguenti requisiti:

• Direttiva RoHS (2002/95/CE)



• Direttiva WEEE (2002/96/CE)

Si prega dunque di smaltire il dispositivo negli appositi punti di raccolta locali o nei centri preposti al riciclaggio.

CE Conformità CE

• Direttiva CEM (2004/108/CE)

La dichiarazione di conformità CE è disponibile in Internet sul sito www.sennheiser.com.

NL Garantie

Sennheiser electronic GmbH & Co. KG geeft voor dit product een garantie van 24 maanden. De op dit moment geldende garantiëvoorwaarden kunt u downloaden van het internet onder www.sennheiser.com of bij uw Sennheiser-leverancier opvragen. In overeenstemming met onderstaande eisen:

• RoHS-richtlijn (2002/95/EG)



• WEEE-richtlijn (2002/96/EG)

Breng het product naar één van de plaatselijke verzamelpunten of naar een recyclingbedrijf.

CE CE-overeenstemming

• EMC-richtlijn (2004/108/EG)

De CE-verklaring is op internet onder www.sennheiser.com beschikbaar.



[HD700]

 **SENNHEISER**

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com